

# User Manual



## **2.2KW/7.5KW/11KW Solar Inverter for Water Pump**

# Table Of Contents

<b>ABOUT THIS MANUAL</b> .....	<b>1</b>
Purpose .....	1
Scope .....	1
<b>SAFETY INSTRUCTIONS</b> .....	<b>1</b>
Inspection.....	1
Installation .....	1
Operation .....	2
Maintenance .....	2
<b>INTRODUCTION</b> .....	<b>3</b>
Features .....	3
Basic System Architecture .....	3
Product Overview.....	4
<b>INSTALLATION</b> .....	<b>5</b>
Unpacking and Inspection.....	5
Preparation .....	5
Mounting the Unit.....	5
PV Connection .....	6
AC Output (Motor) Connection .....	7
AC Input Connection.....	8
Final Assembly .....	9
Control Signal Connection (Optional) .....	9
<b>COMMISSIONING</b> .....	<b>10</b>
<b>OPERATION</b> .....	<b>11</b>
Power ON/OFF .....	11
Operation and Display Panel .....	11
Parameter Setting .....	12
<b>Fault and Warning Code</b> .....	<b>15</b>
Fault Reference Code.....	15
Warning Reference Codes.....	16
<b>SPECIFICATIONS</b> .....	<b>17</b>

# ABOUT THIS MANUAL

## Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference.

## Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

# SAFETY INSTRUCTIONS



**WARNING:** This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

## Inspection




If missing components or damaged inverter is found after receiving, please do NOT install or operate it. Otherwise, it may cause human injury or equipment damage.

## Installation



1. Before installation, please make sure if the phases and nominal voltage of power sources meet the requirement.
2. Check if all wires are firmly connected without short circuit. Otherwise, it will cause equipment damage.
3. Do NOT install this inverter under direct sunlight because high temperature may cause equipment damage.
4. Please install the inverter away from inflammable and explosive objectives. Please ensure no liquid can enter the inverter.
5. Please install the inverter on metal non-combustible surface.

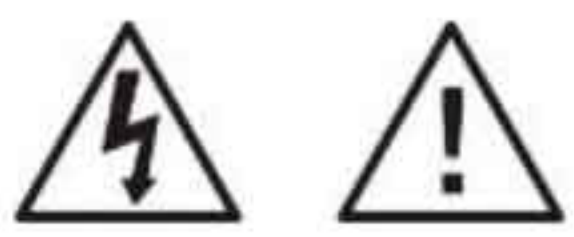

1. **CAUTION!!** Only qualified personnel can install and operate this inverter.
2. To reduce risk of electric shock, disconnect power source before making wire connection. Otherwise, it may cause electrical shock.
3. To reduce risk of electric shock, NEVER touch any terminals on electric circuits.

# Operation



1. Only after wire connection is complete and put cover back to the inverter, it's ok to do commissioning. Otherwise, it will cause electric shock
2. If sunlight is sufficient but little water is pumped, maybe the wires on motor connection are reversely connected. Please reverse any two wires of them.
3. When testing water pump, be sure to install water pump at appropriate water level. Never allow water pump in dry running. Otherwise, the inverter will activate protection.

# Maintenance



1. Only qualified personnel can maintain, repair, inspect the inverter and replace any components.
2. It may still contain energy after disconnecting power source for 10 minutes. Only service the unit after the bus voltage is within safe range.

# INTRODUCTION

Interest in renewable energy has increased over the past few years due to solar power becoming more cost effective and eco-friendly. This is a solar inverter which allows power to be switched from the DC power obtained from solar panels to the AC power needed to control the pump. This solar inverter is also accepted manually from the grid or 3-phase generator when solar power is not efficient. With the renewable solar inverter, pumps can adapt to solar power sources rather than traditional electrical supplies or generators.

This solar inverter is built-in with MPPT solar charger to maximize solar power. Besides, it is easy to install with low maintenance cost. It becomes an eco-friendly solution for the rural areas where grid power is expensive and unreliable.


## Features

- Built-in MPPT solar charger
- **Supports three-phase motor**
- Compatible to utility or generator input
- Built-in full protection and self-diagnosis
- Soft start function prevents water hammer effect and extends system lifecycle
- Comprehensive LCD and LEDs display real-time system status
- Remote monitoring through RS-485


## Basic System Architecture

This solar inverter is specially designed to power water pump. The following illustration shows basic application for this inverter. It also includes following devices to have a complete running system:

- 3-phase generator or Utility.
- PV modules

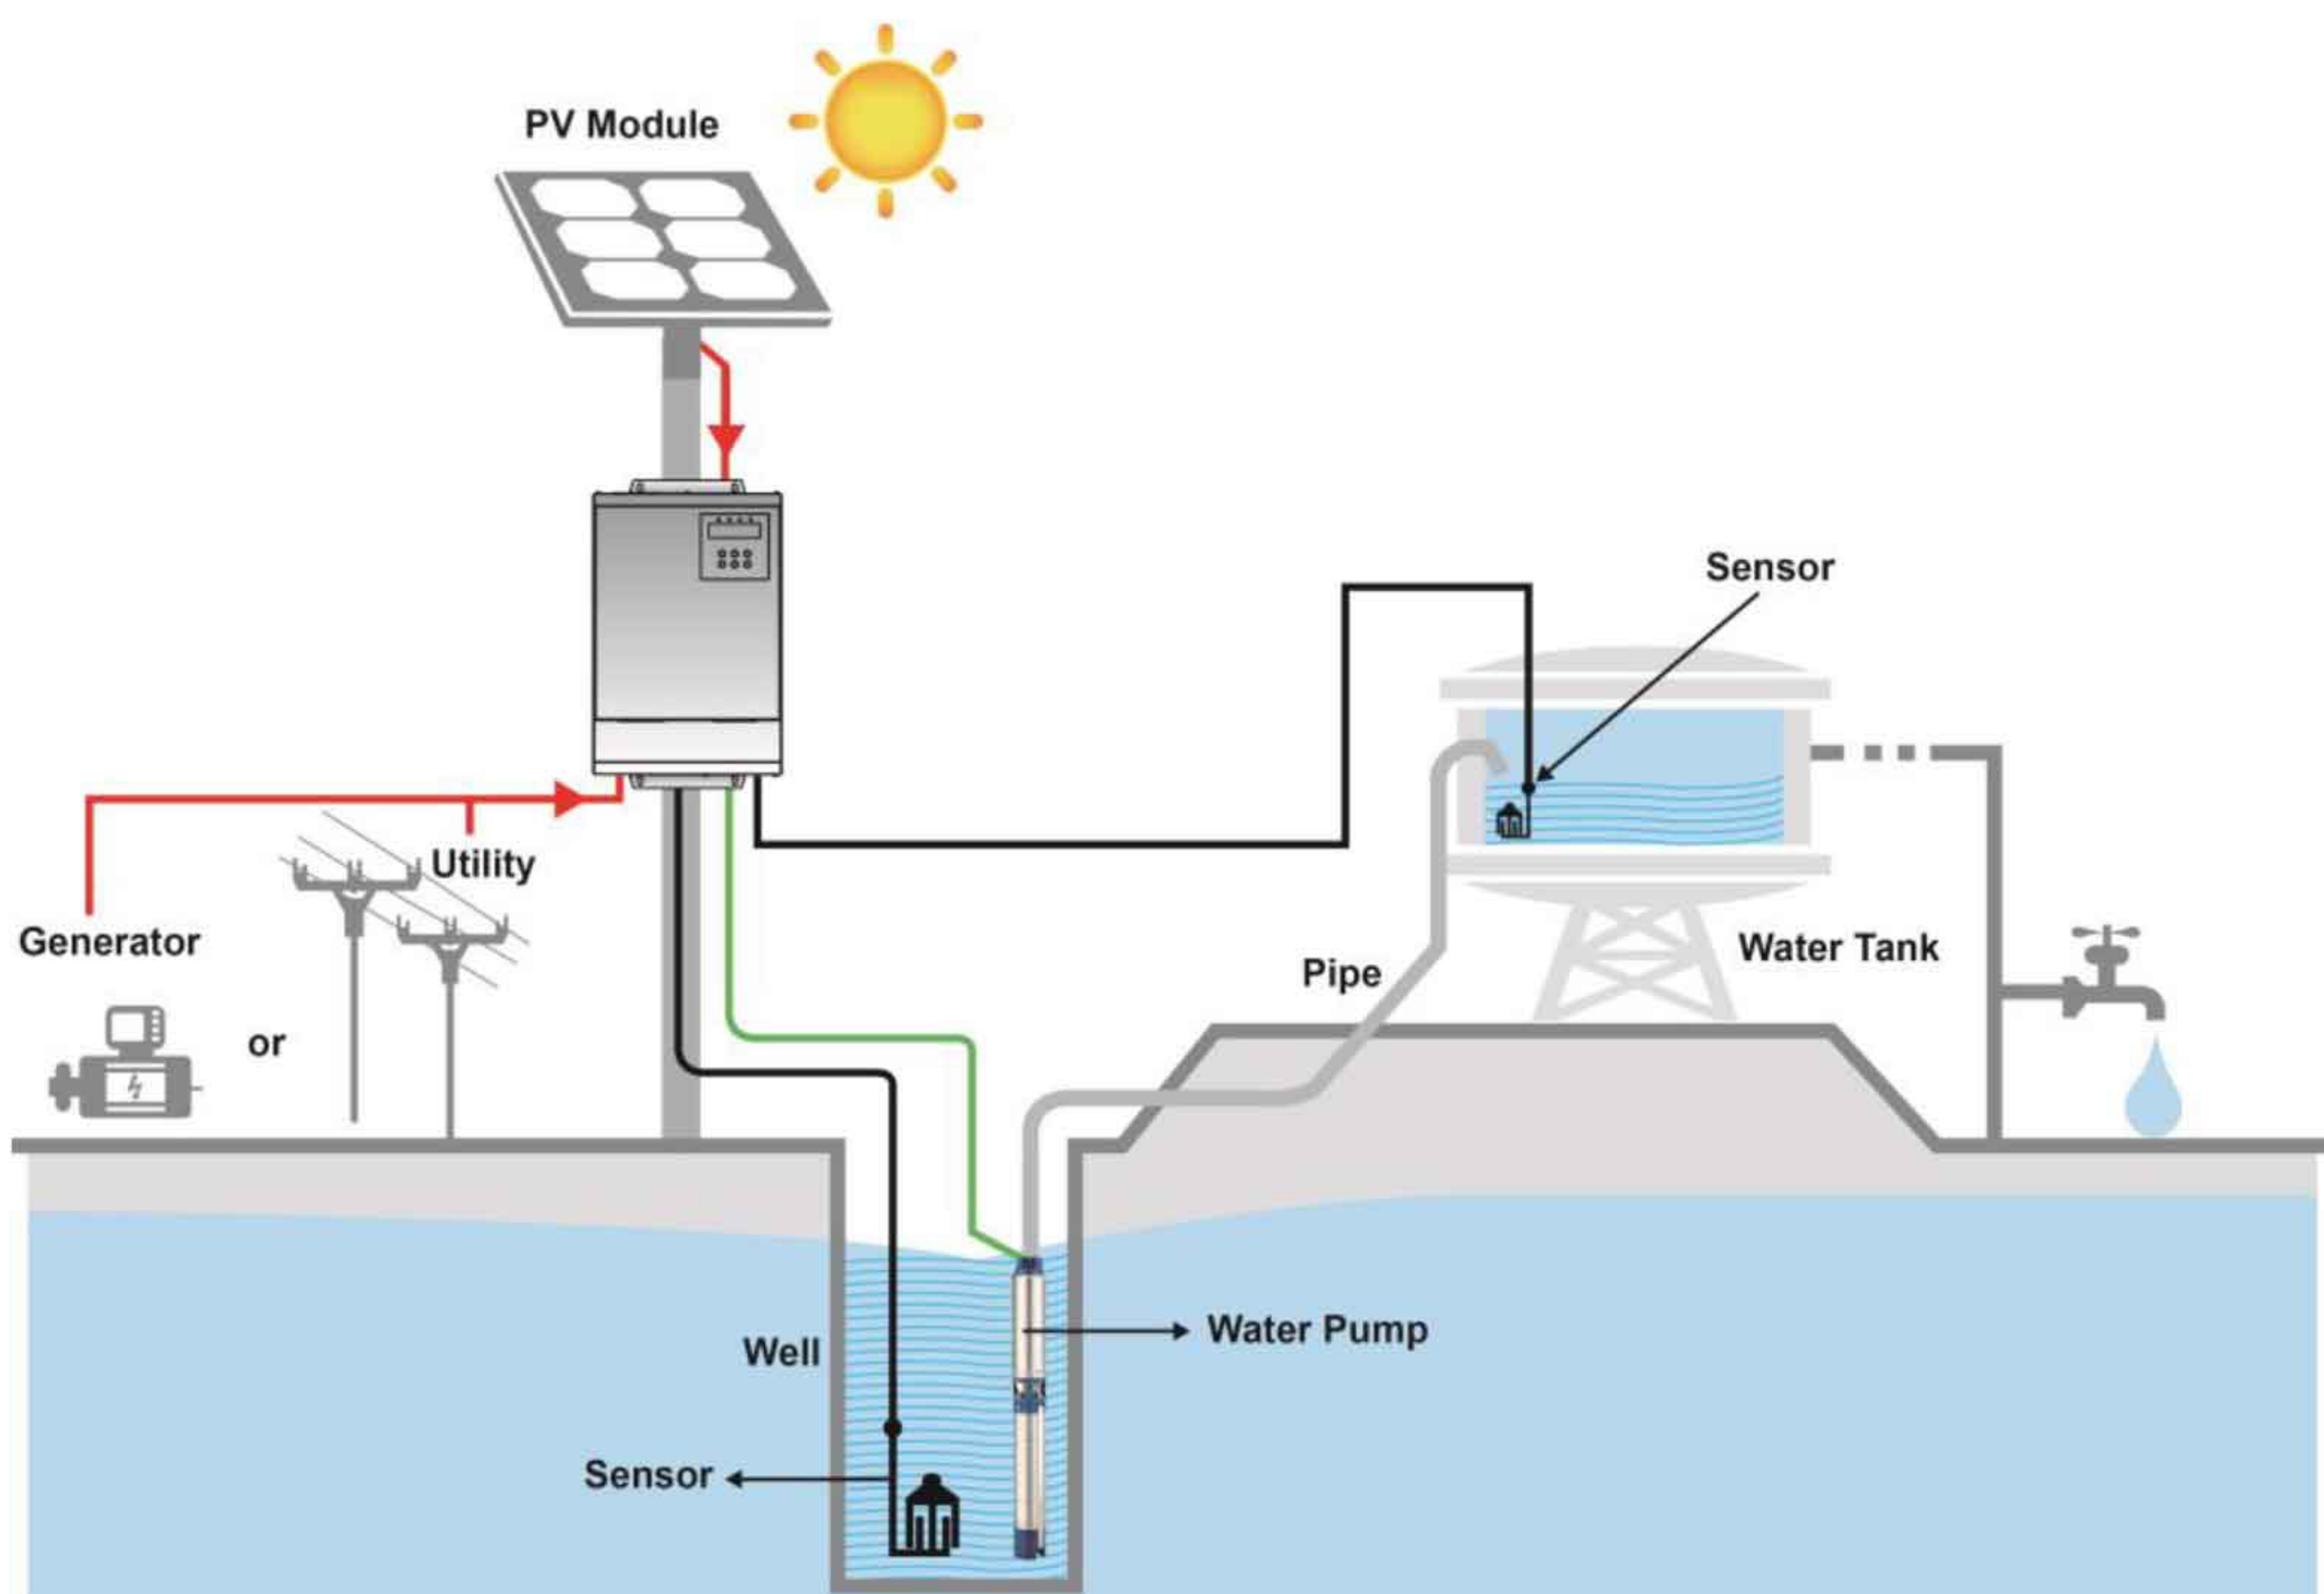

# Product Overview

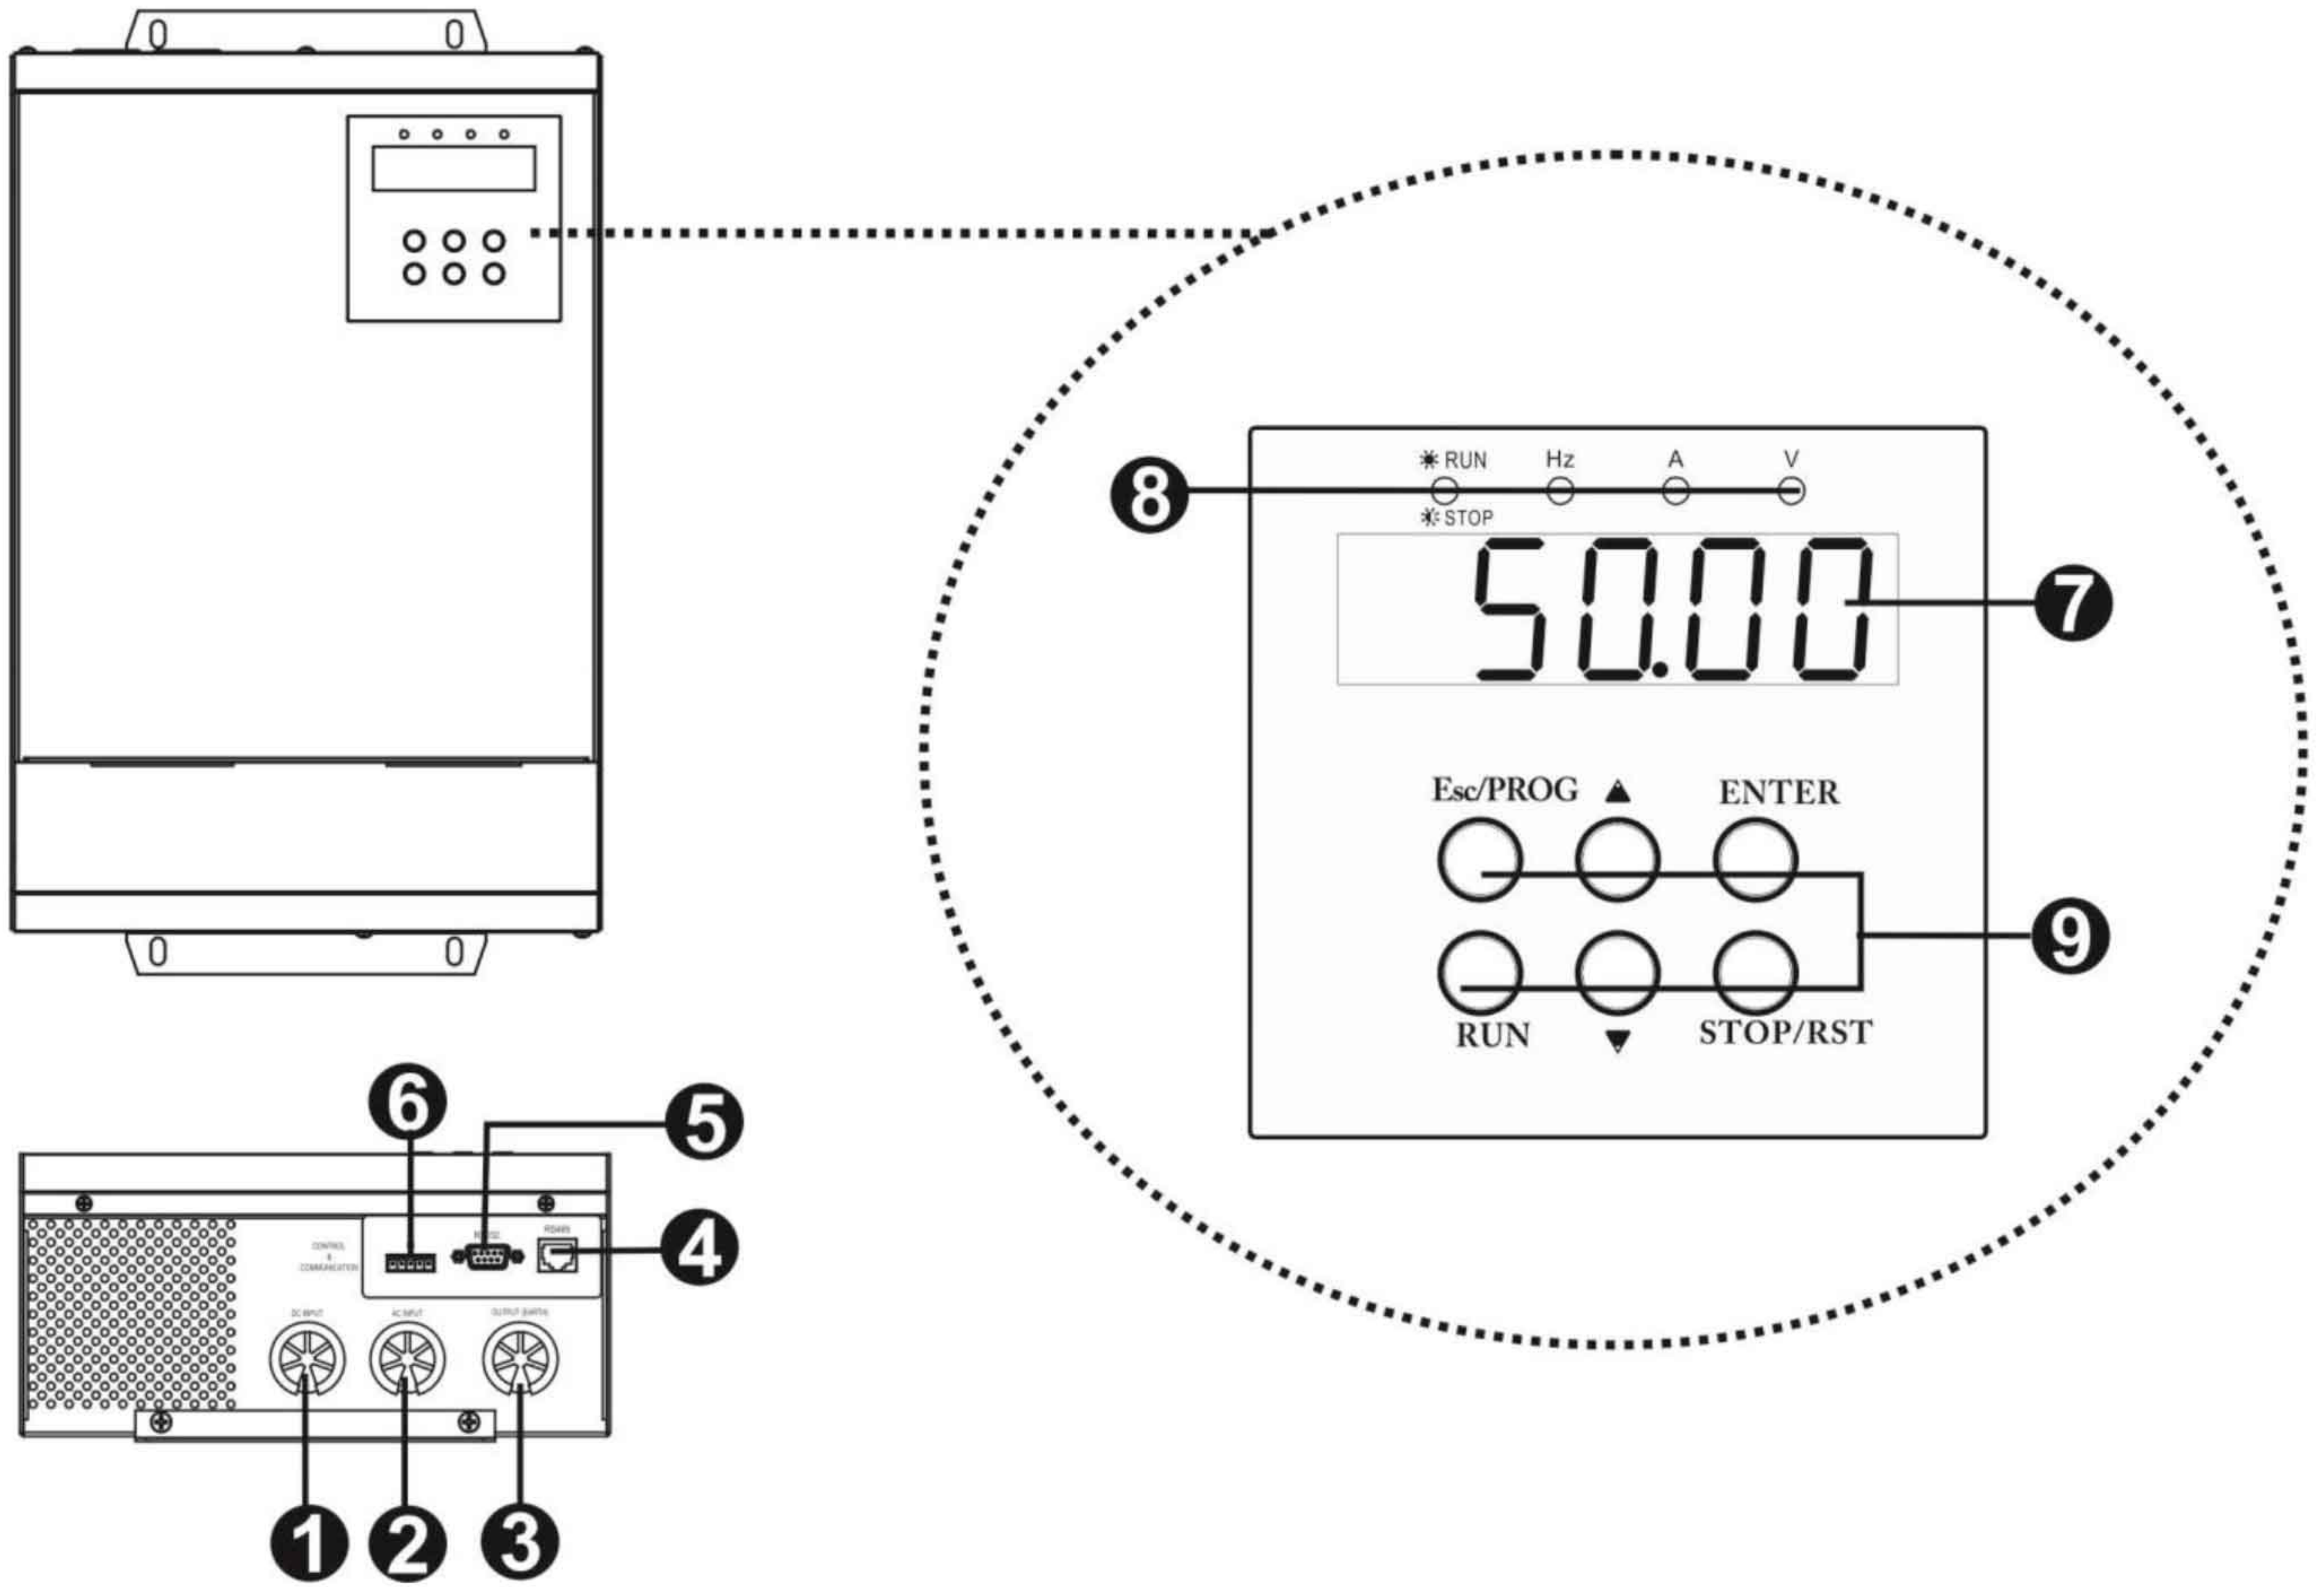

1. PV input
2. AC input
3. AC output
4. RS-485 communication port
5. RS-232 communication port
6. Signal control slot
7. LCD screen (Refer to Operation and Display Panel for the details)
8. LED indicators (Refer to Operation and Display Panel for the details)
9. Operation buttons (Refer to Operation and Display Panel for the details)

# INSTALLATION


## Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- The unit x 1
- User manual x 1
- RJ45 cable x 1
- RS-232 cable x 1

## Preparation


Before connecting all wirings, please take off bottom cover by removing two screws as shown below.

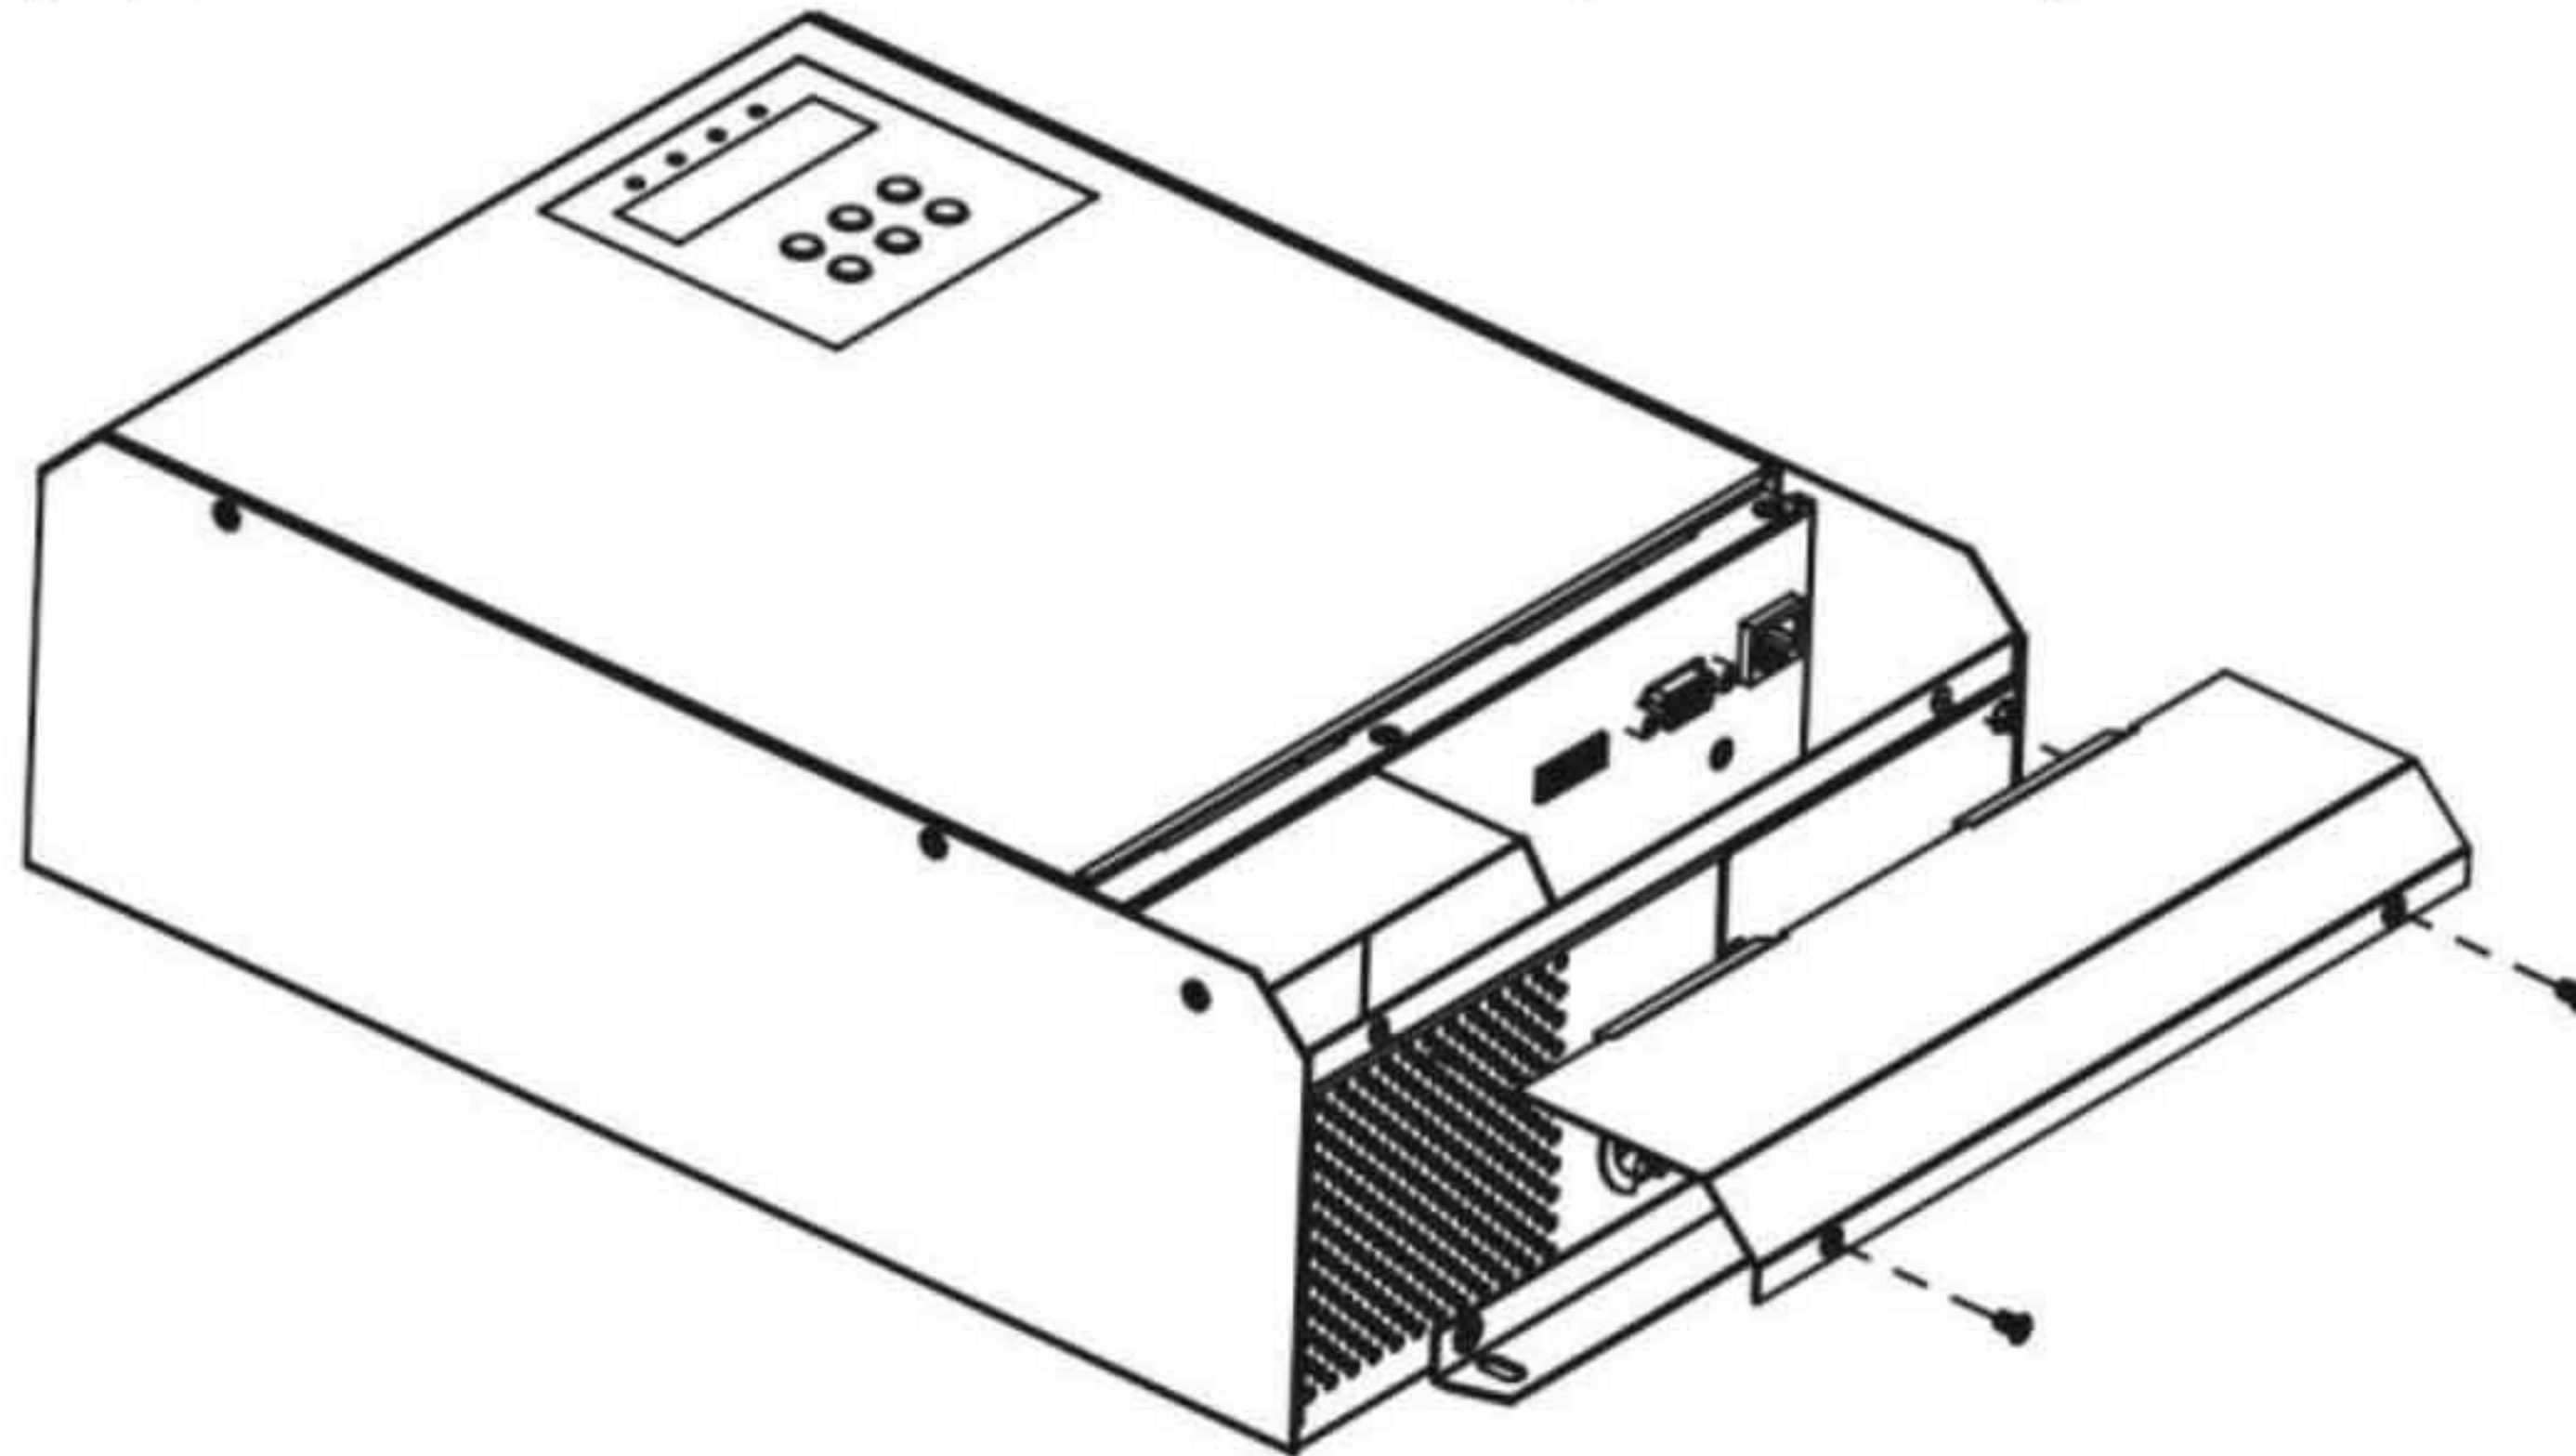

## Mounting the Unit


Consider the following points before selecting where to install:

- Do not mount the inverter on flammable construction materials.
- Mount on a solid metal surface.
- Avoid direct sunlight. Be sure the environment is shady and cool.
- Be sure to install the inverter into a box with waterproof and dustproof.
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

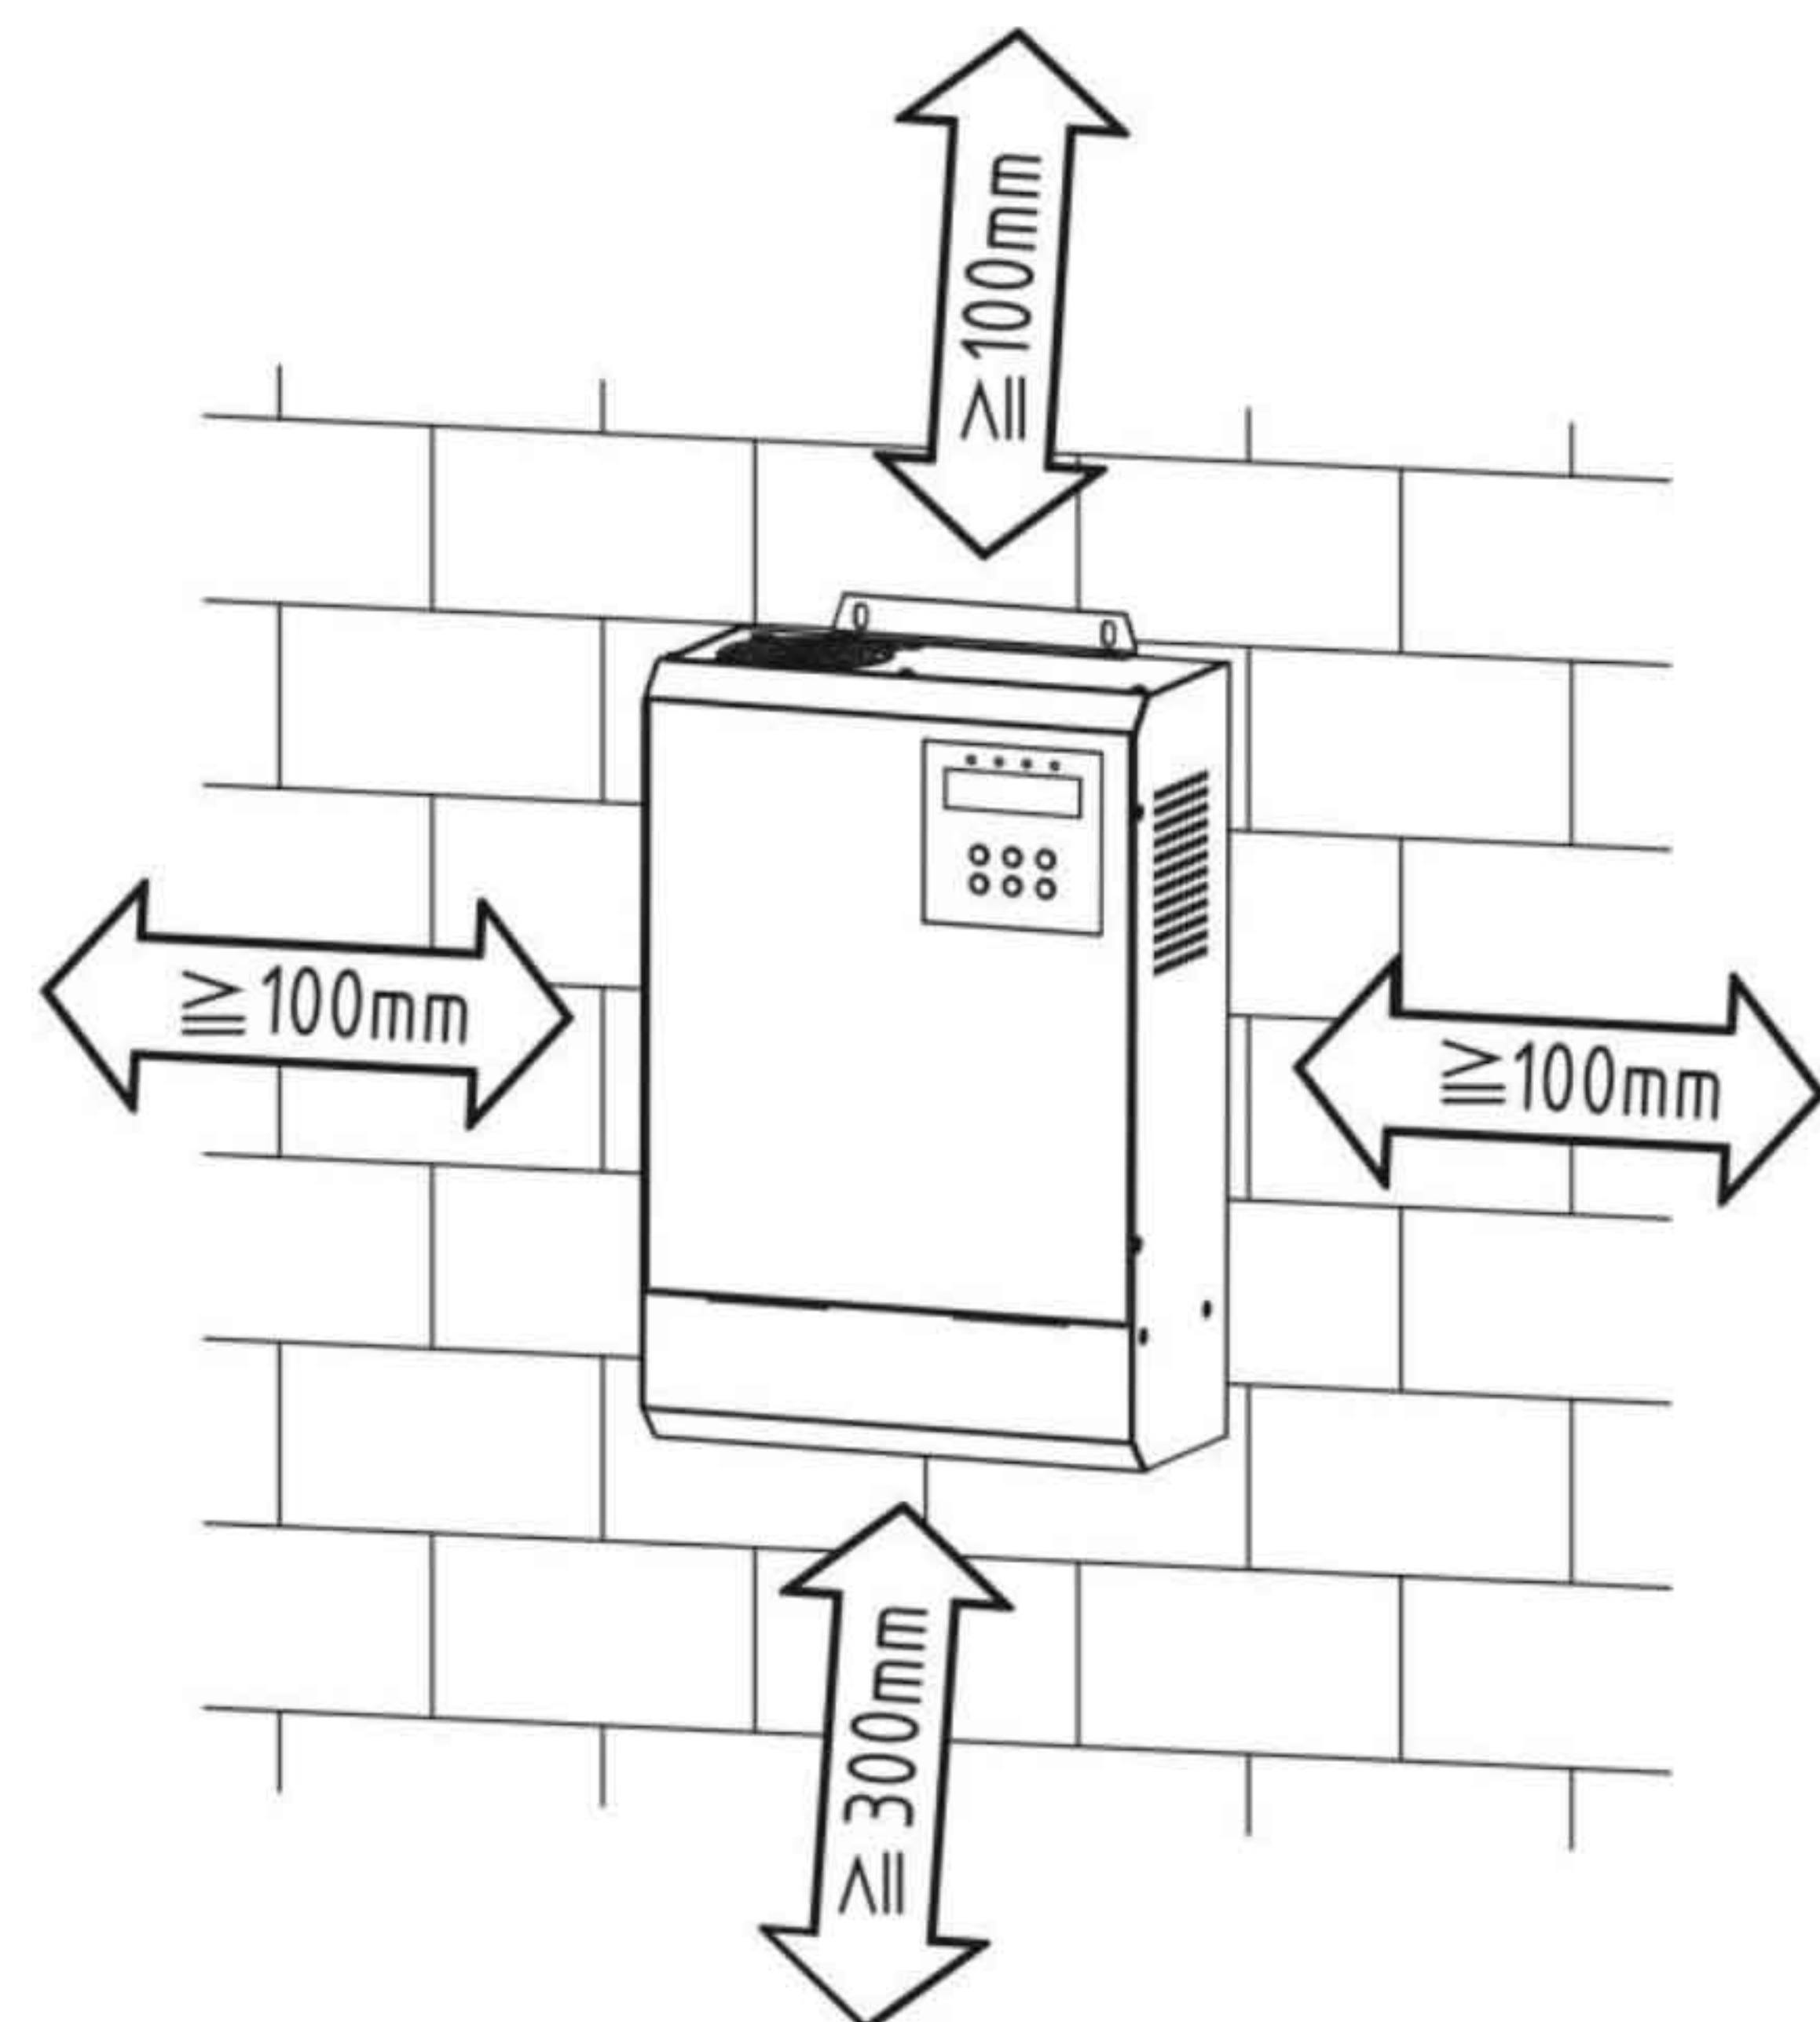


**SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.**

1. Drill four holes in the marked locations with four screws.

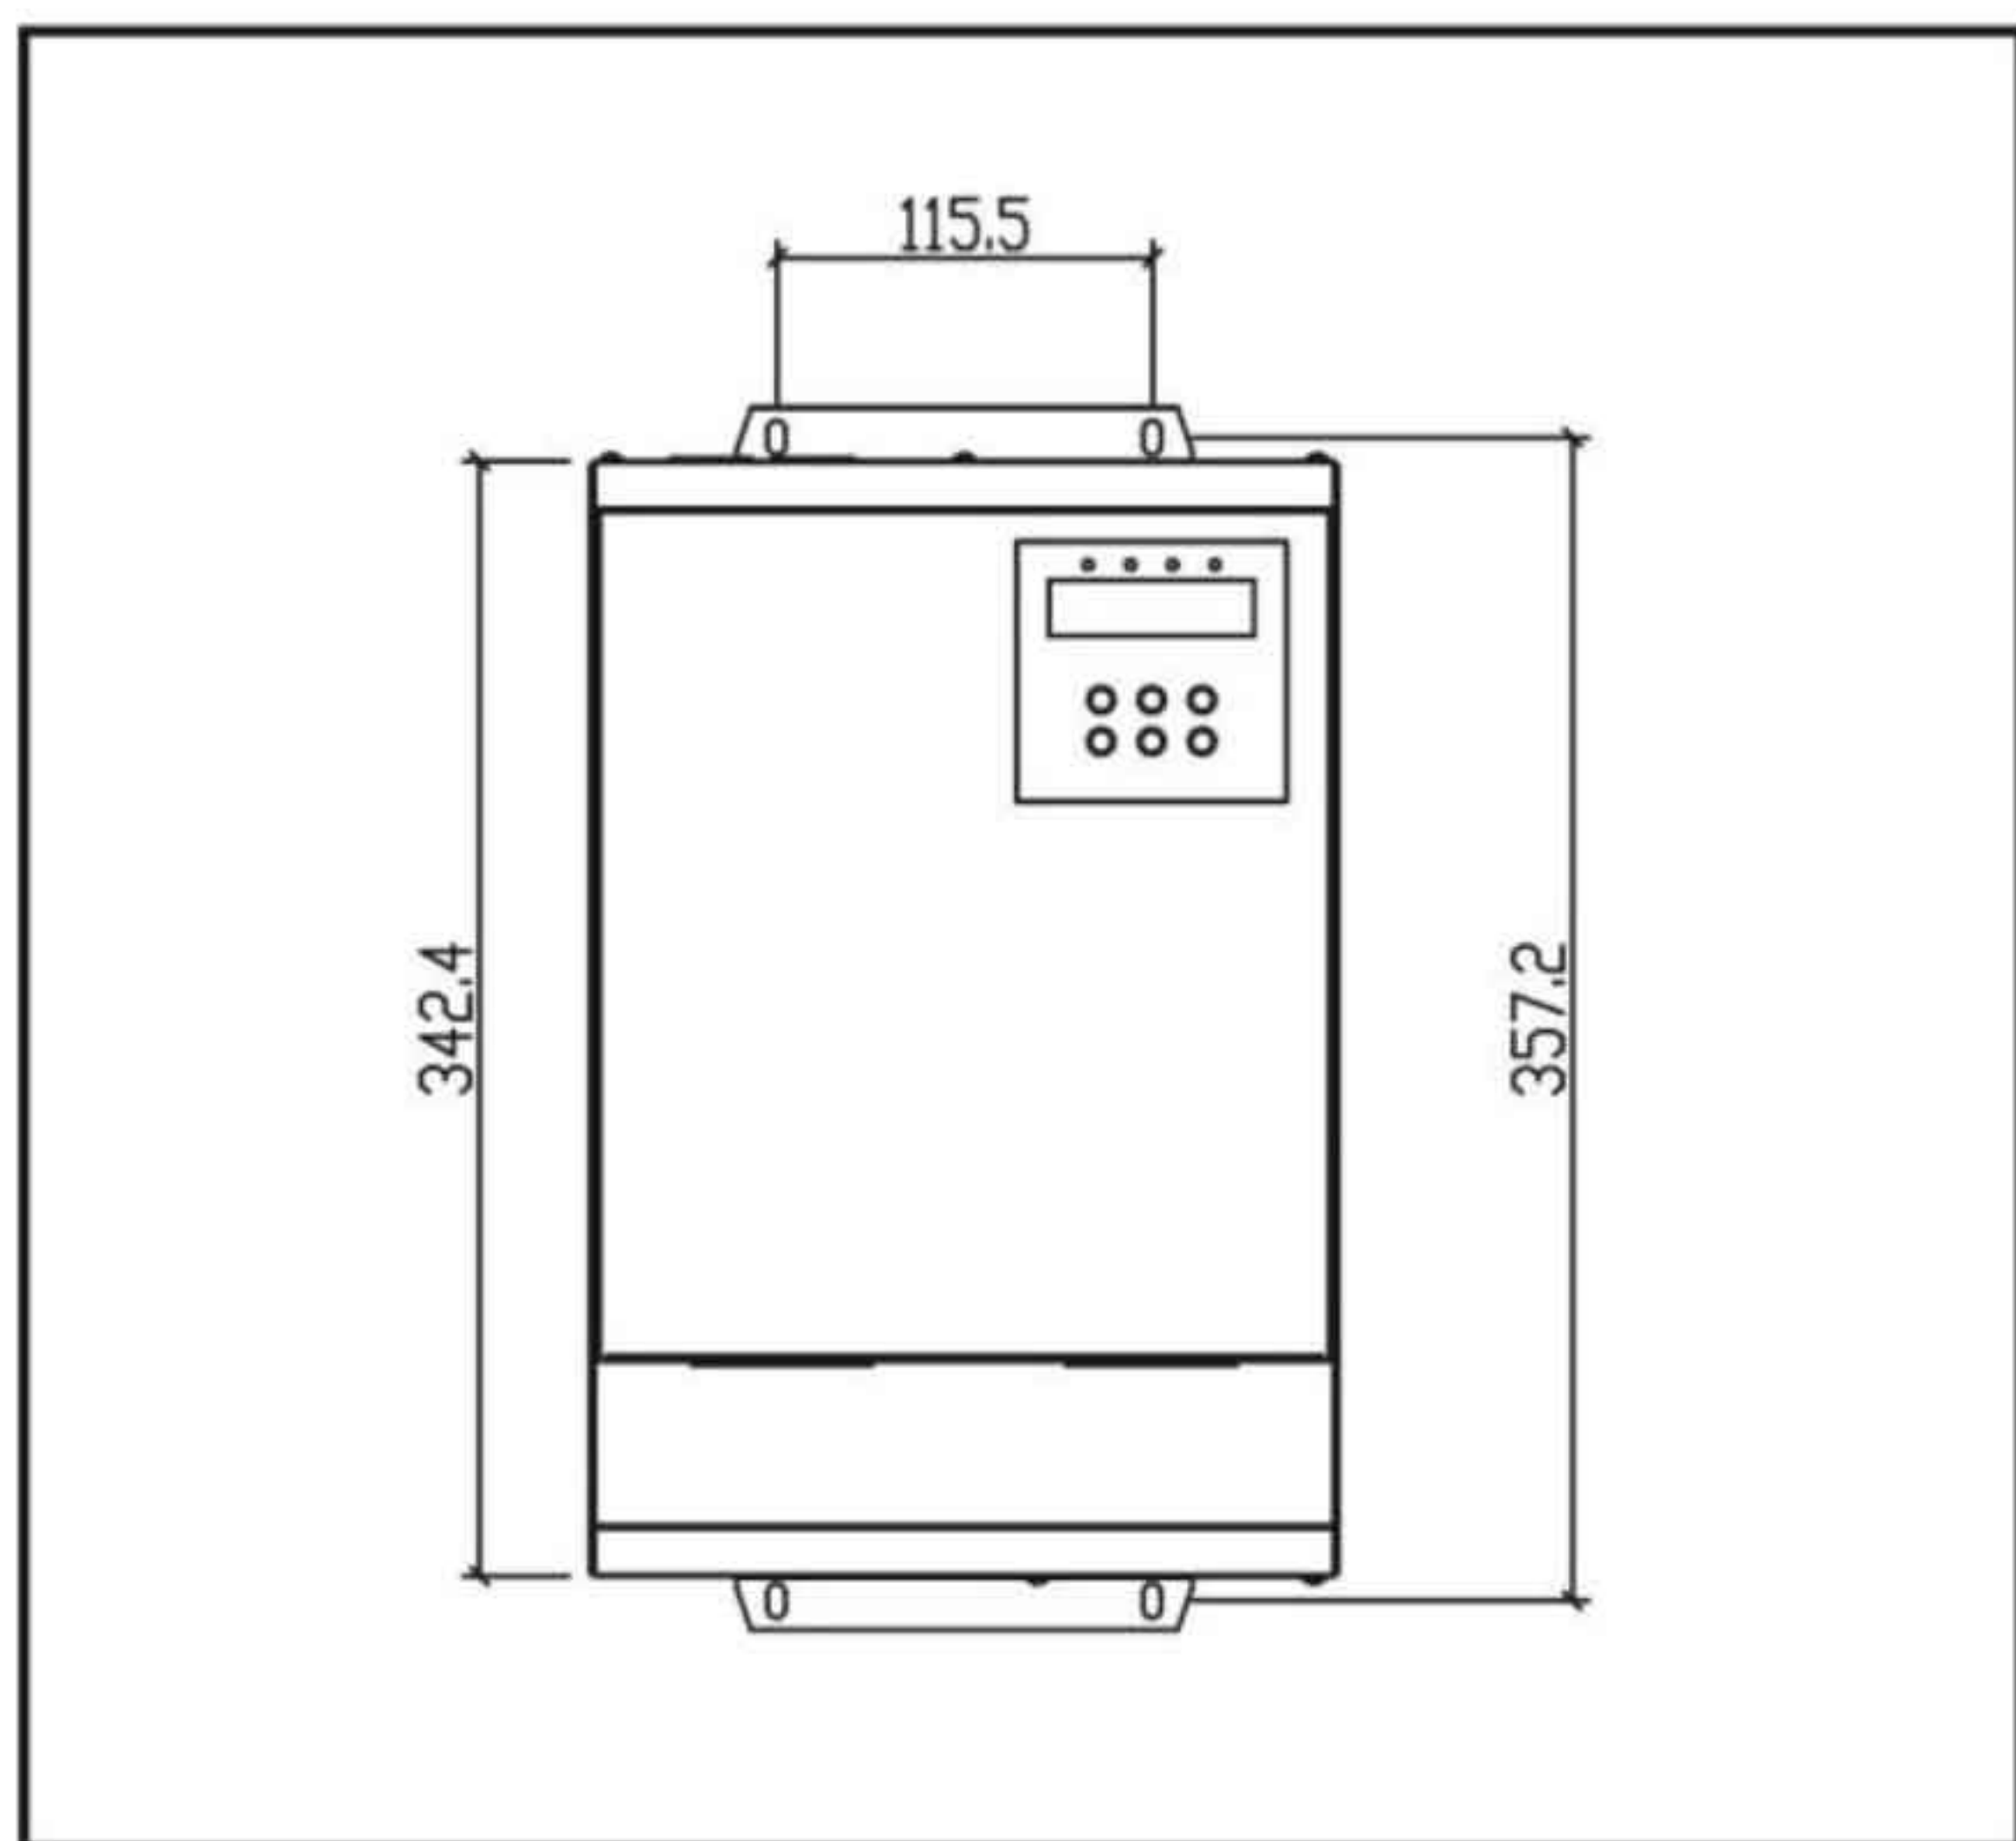

2. Install the unit by screwing four screws. It's recommended to use M5 screws.

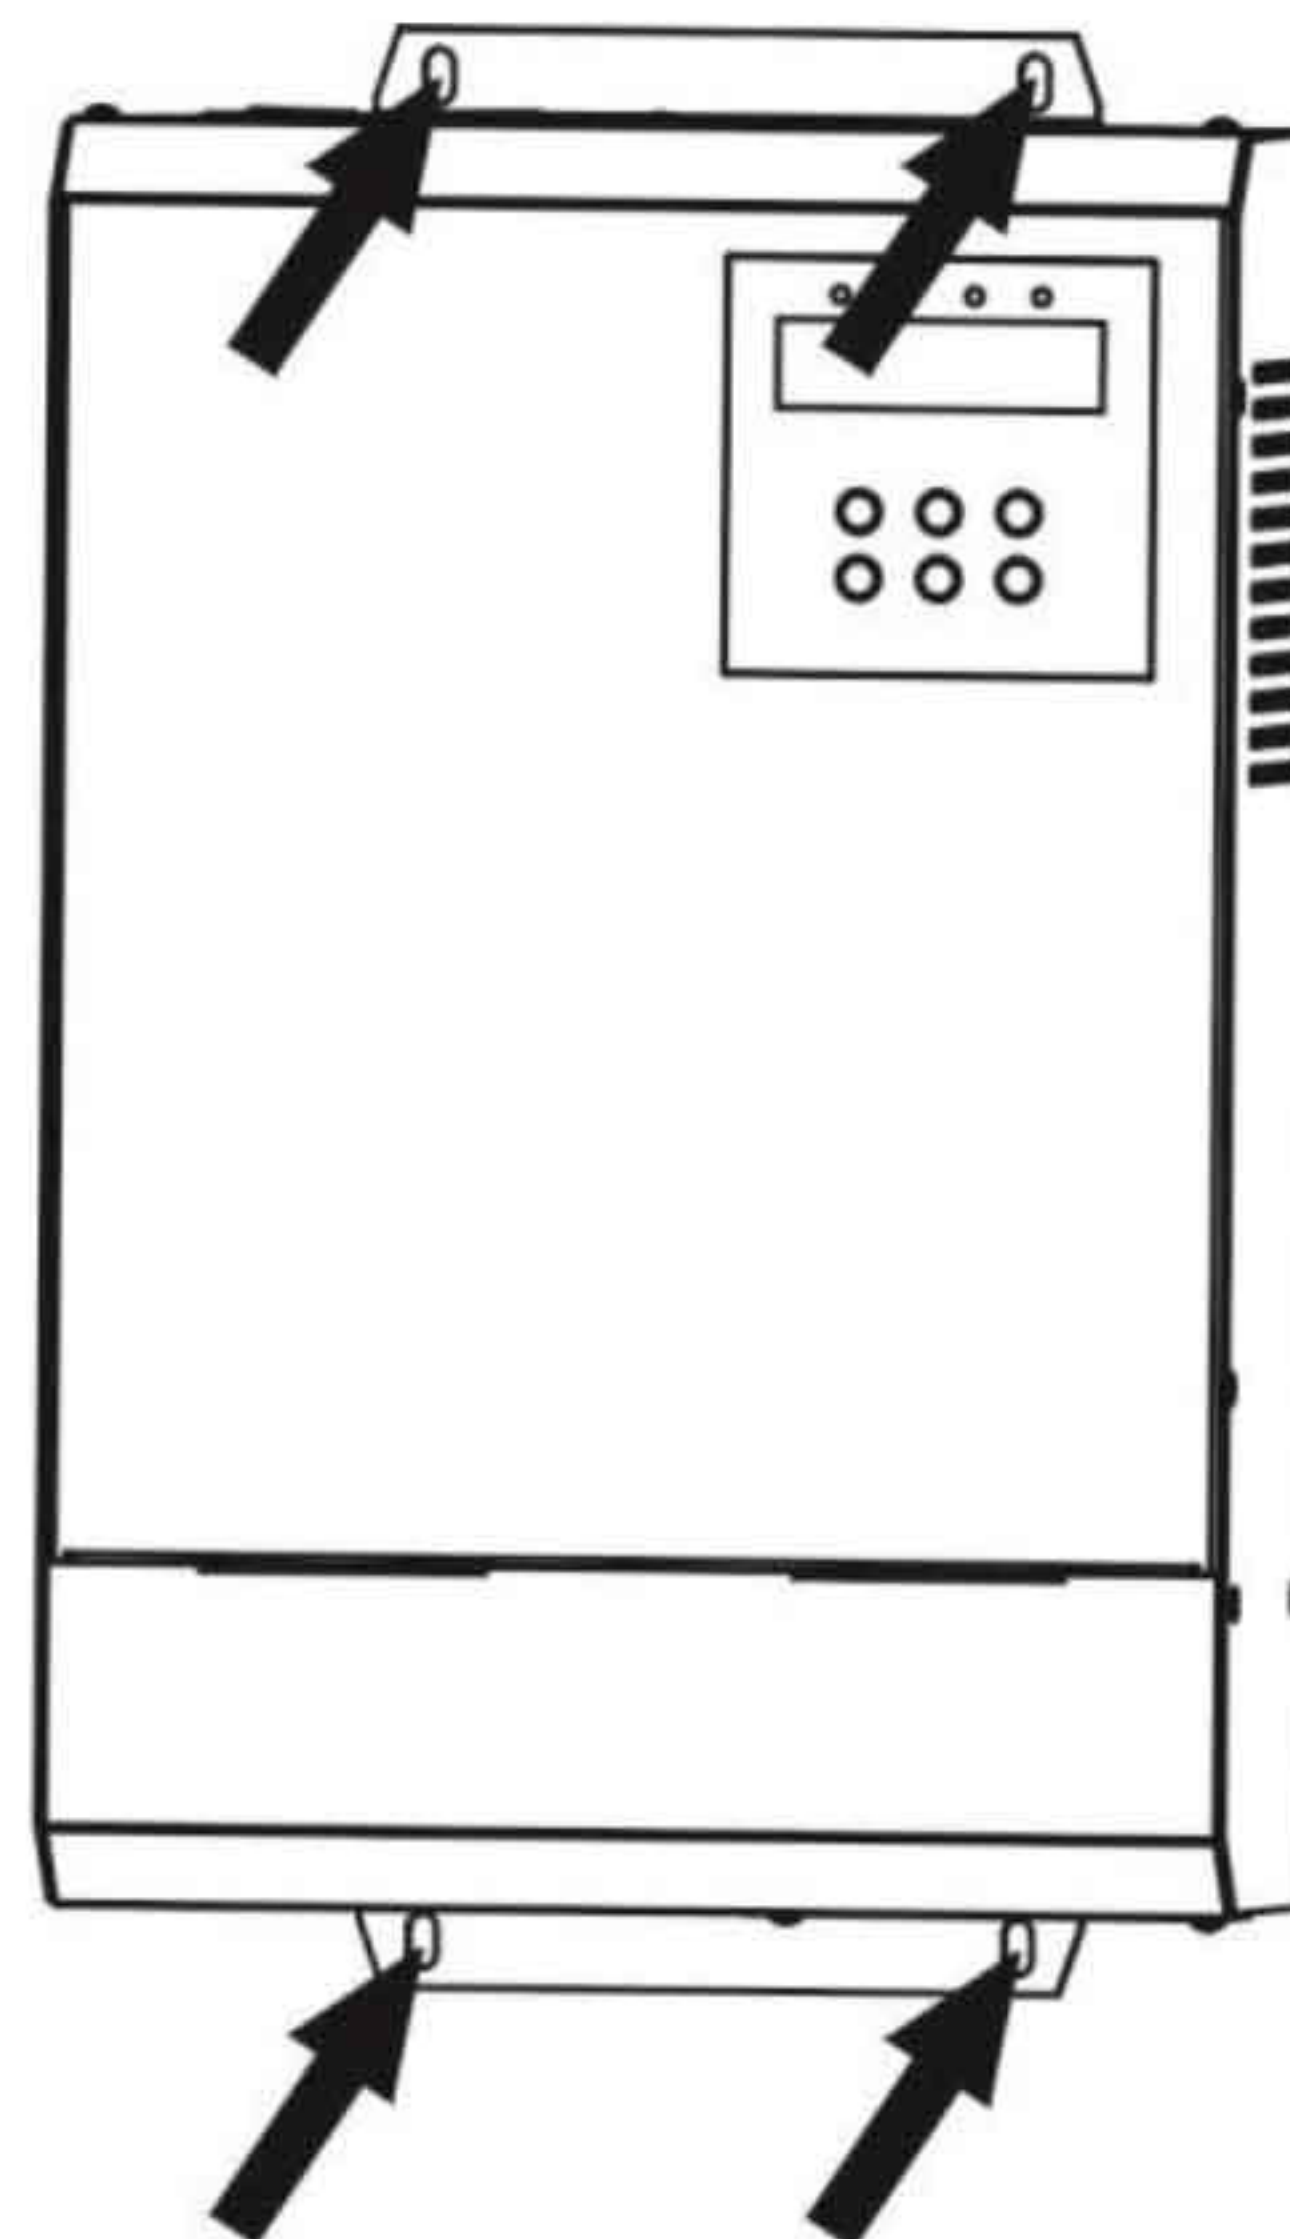

## PV Connection

**CAUTION:** Before connecting to PV modules, please install **separately** a DC circuit breaker between inverter and PV modules. The recommended spec of DC breaker is C8A/2P/1000VDC/25KA for 2.2KW, C32A/2P/1000VDC/25KA for 7.5KW and C40A/2P/1000VDC/25KA for 11KW.

**NOTE:** It's required to install PV combiner box when using several PV modules in parallel and series.



### **CAUTION: Important**

Before making PV connection, be sure to do the following actions to prevent human injury or machine damage.

1. It's required to turn off circuit breaker.
2. Make sure connect positive pole (+) of PV input connector in inverter to positive pole (+) of PV modules and negative pole (-) of PV input connector in inverter to negative pole (-) of PV modules.
3. Make sure AC input power source is disconnected.



### **CAUTION: Important**

If there is no diode protection for current backfeed protection between PV module and inverter, please do not turn on AC and DC breakers at the same time. Otherwise, it will cause damage on PV modules.




# AC Output (Motor) Connection

**CAUTION!!** There are two terminal blocks with "AC INPUT" and "AC OUTPUT" markings. Be sure to connect motor with "AC OUTPUT" terminals. Please do NOT mis-connect input and output connectors.

**WARNING!** All wiring must be performed by a qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for AC output connection. To reduce risk of injury, please use the proper recommended terminal and cable size as below.

**Recommended terminal types:**

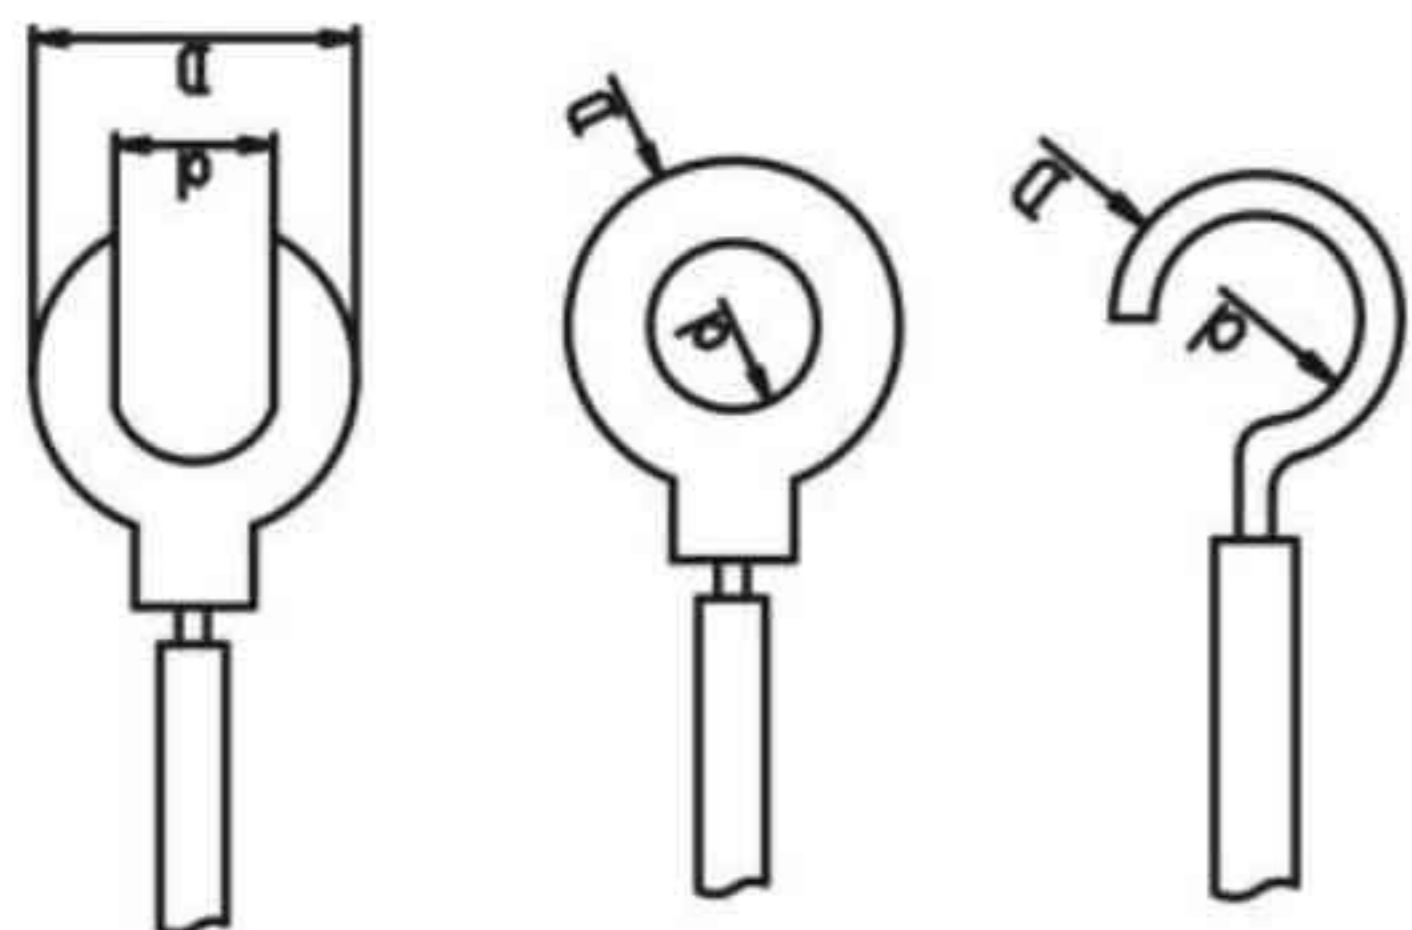

**Suggested cable requirement:**

Model	Typical Amperage	Wire size	Terminal Dimensions		Torque Value
			d (mm)	D (mm)	
			2.2KW	4.8A	
7.5KW	15A	13 AWG	4.5	9.5	1.3 ~ 1.4 Nm
11KW	22A	11 AWG	4.5	9.5	1.3 ~ 1.4 Nm


Please follow below steps to implement motor connection:

1. Remove insulation sleeve 10mm for three conductors. And shorten three conductors 3 mm.
2. Insert wires according to polarities indicated on terminal block and tighten the terminal screws.

**NOTE:** To reverse the direction of motor rotation, reverse any two wires.

US	Black (BLK)	Red (RED)	Yellow (YEL)	Ground (GND)
International	Gray (GRY)	Black (BLK)	Brown (BRN)	Ground (GND)

International standards for motor lead wire

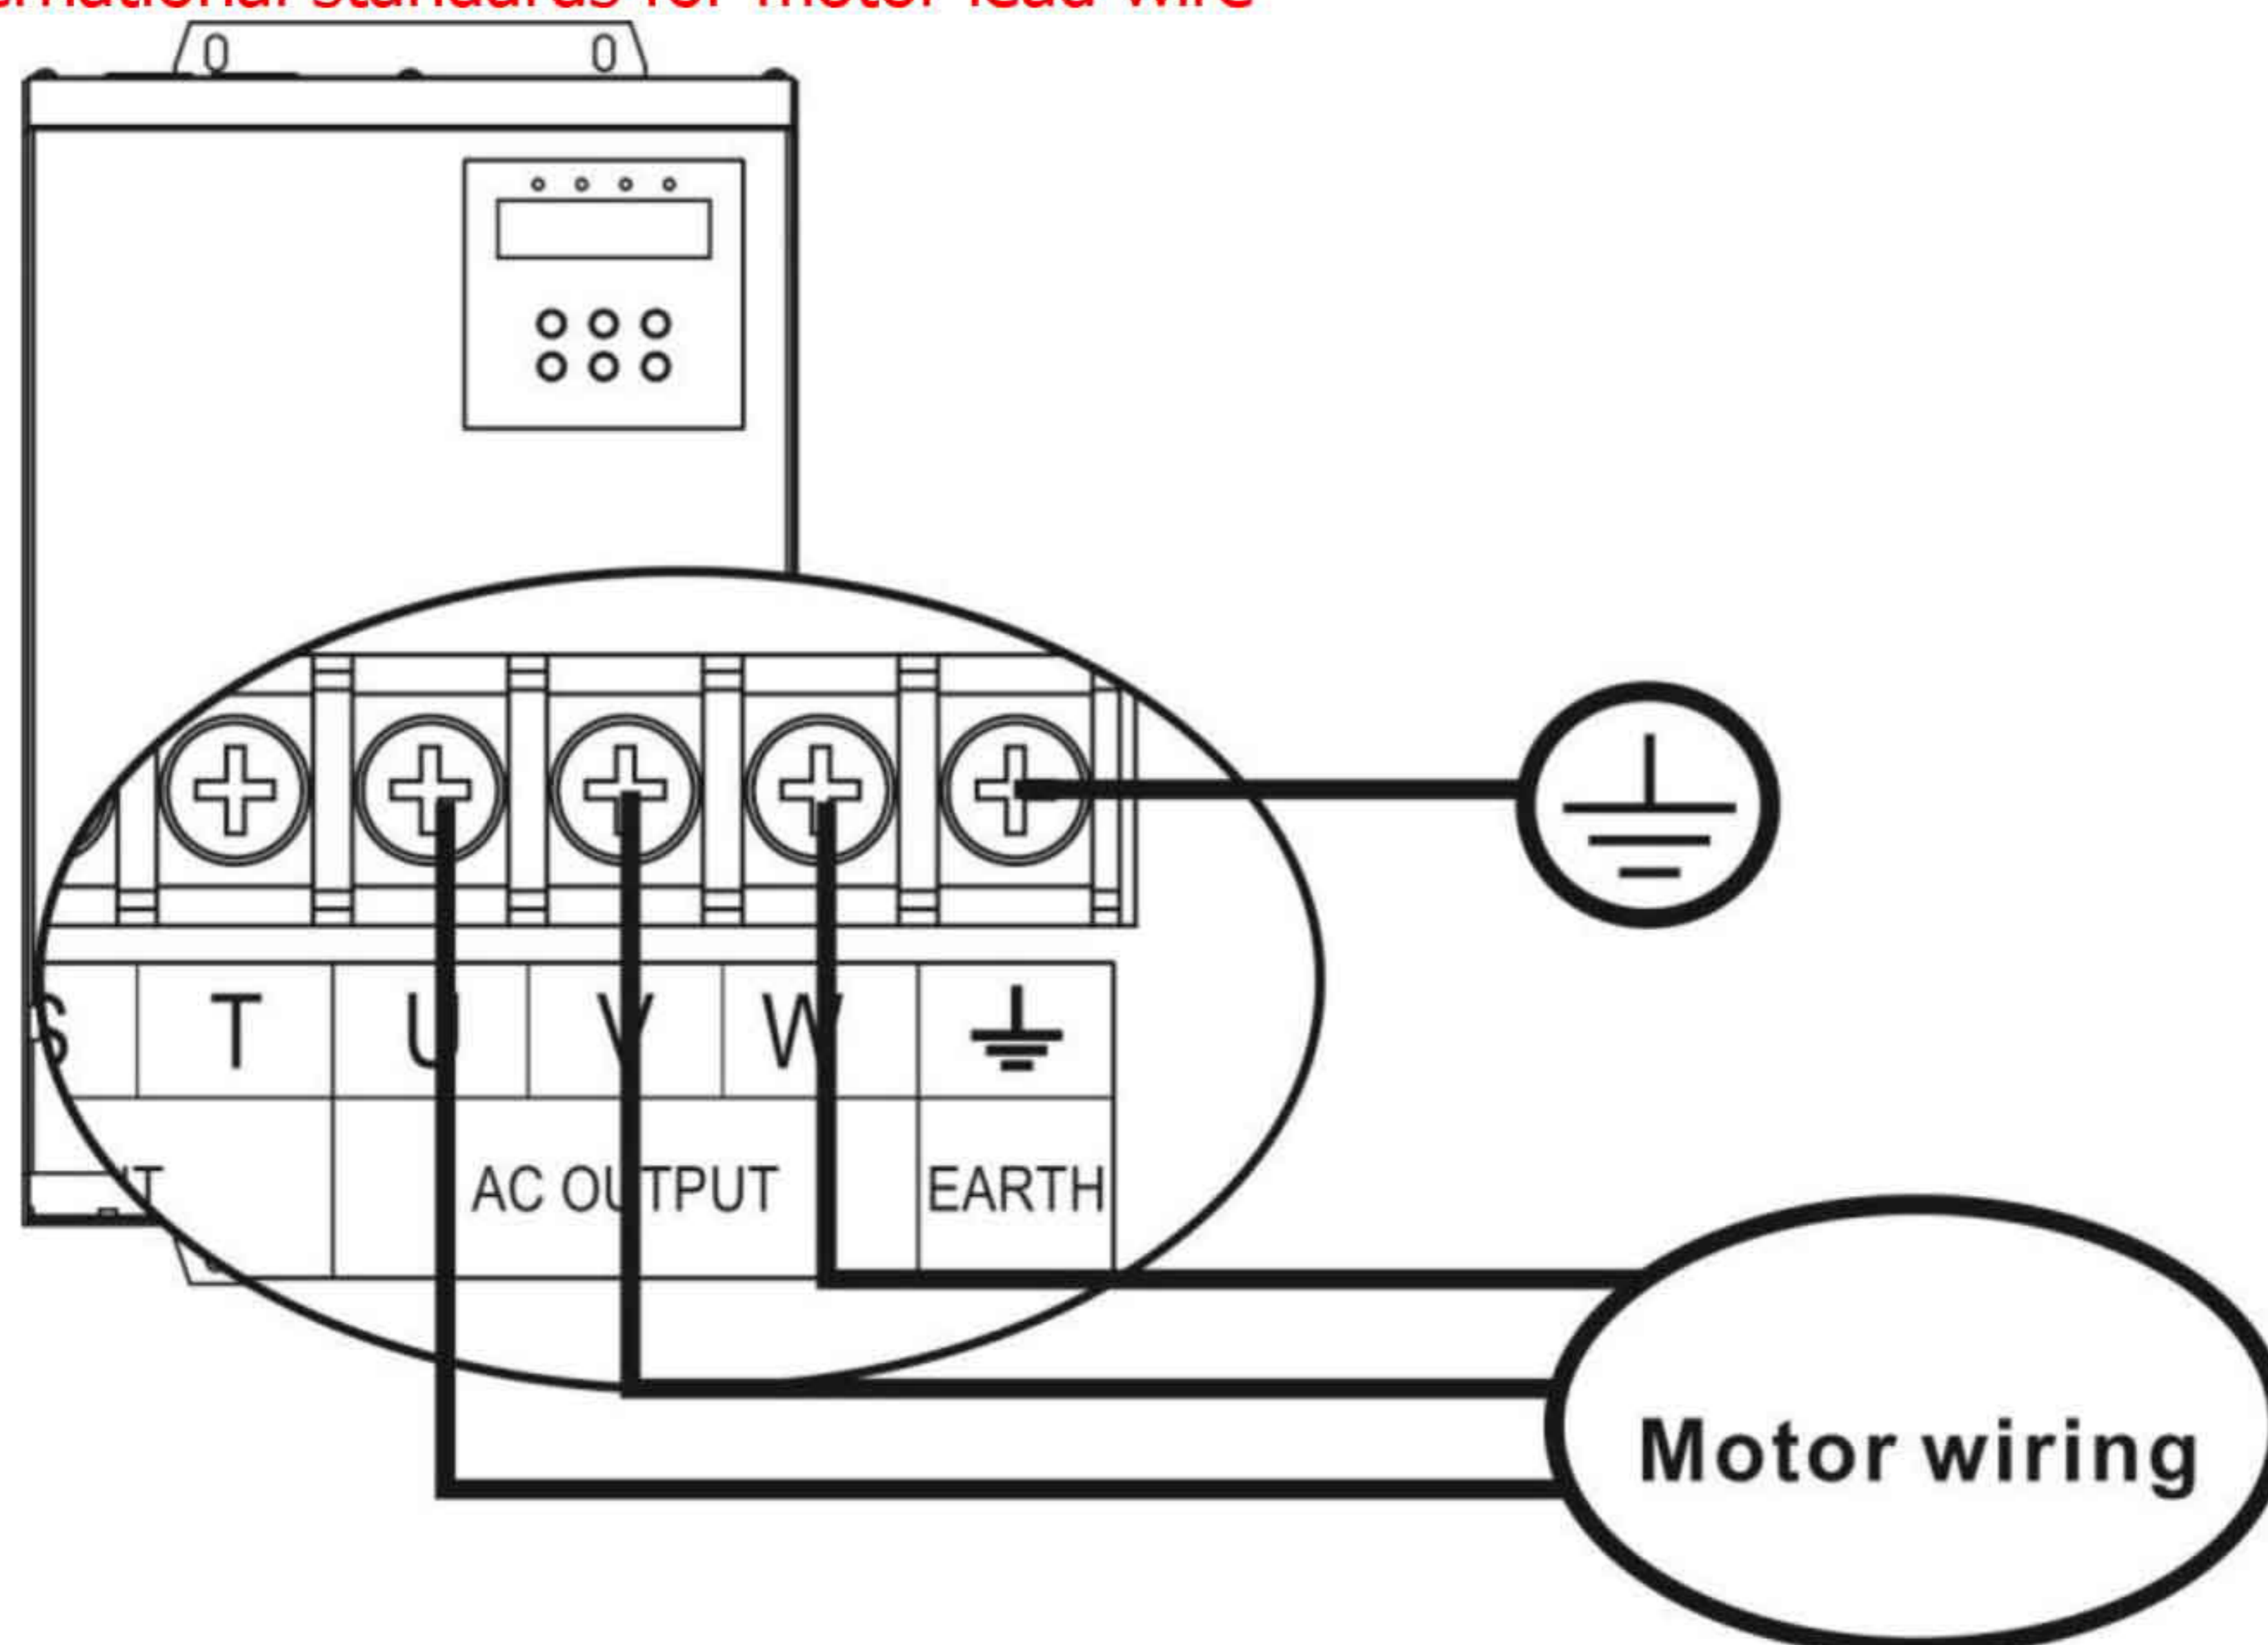

3. Make sure the wires are securely connected.

# AC Input Connection


**CAUTION!!** Before connecting to AC input power source, please install a **separate** AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is D10A/3P/400VAC/25KA for 2.2KW, D25A/3P/400VAC/25KA for 7.5KW and D32A/3P/400VAC/25KA for 11KW.

**CAUTION!!** There are two terminal blocks with "AC INPUT" and "AC OUTPUT" markings. Be sure to connect motor with "AC OUTPUT" terminals. Please do NOT mis-connect input and output connectors.

**WARNING!** All wiring must be performed by a qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended terminal and cable size as below.

### Suggested terminal types:

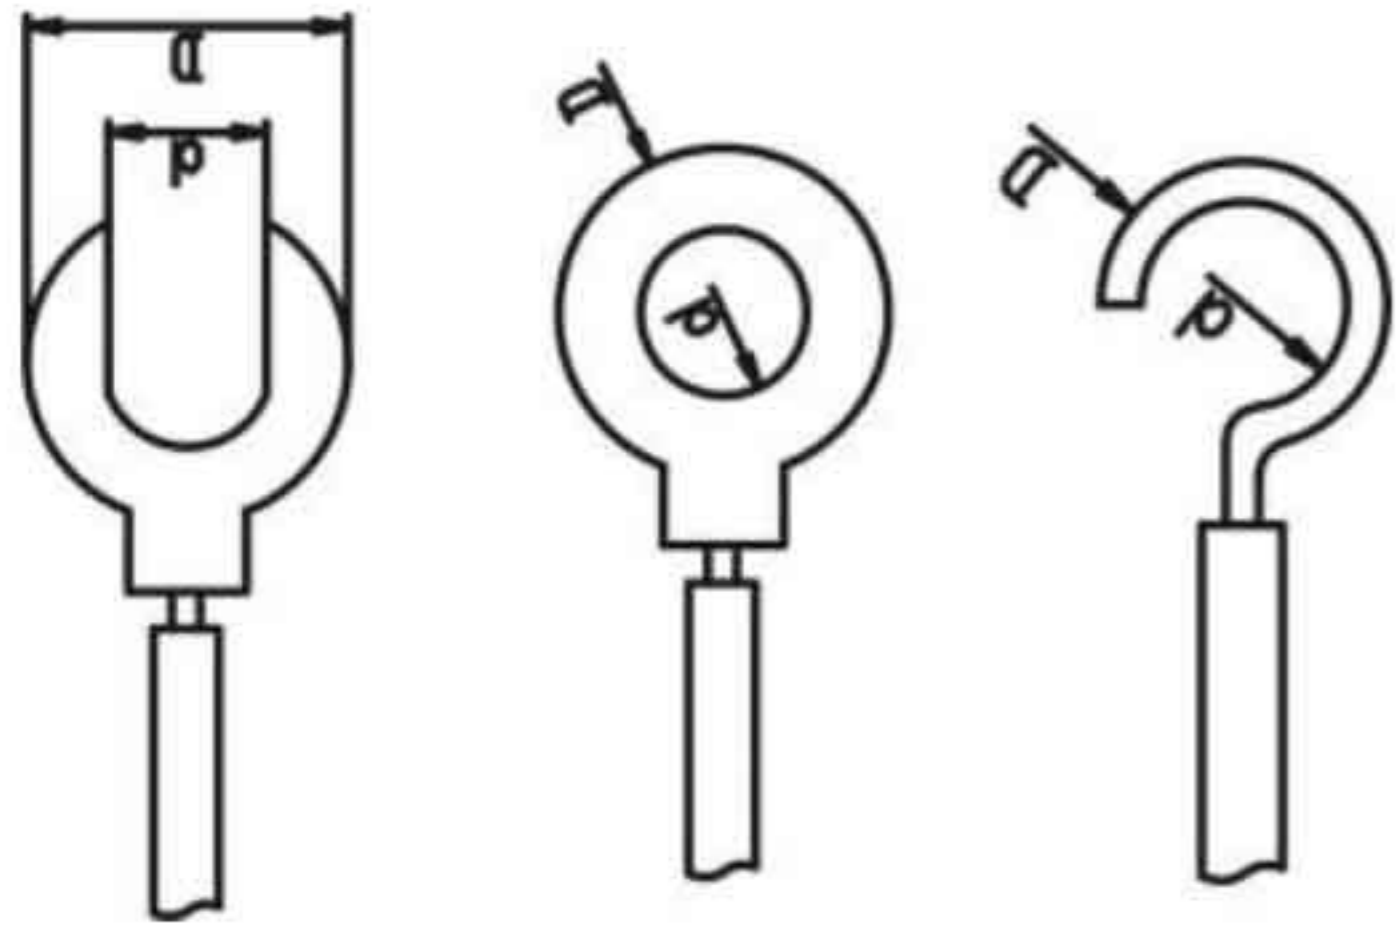


### Suggested cable requirement:

Model	Typical Amperage	Wire	Terminal Dimensions		Torque Value
			d (mm)	D (mm)	
			2.2KW	5.4A	
7.5KW	18.5A	12 AWG	4.5	9.5	1.3 ~ 1.4 Nm
11KW	27.1A	10 AWG	4.5	9.5	1.3 ~ 1.4 Nm

Please follow below steps to implement AC input connection:

1. Before making AC input connection, be sure to open AC protector or disconnecter first.
2. Remove insulation sleeve 10mm for three conductors. And shorten three conductors 3 mm.
3. Insert wires according to polarities indicated on terminal block and tighten the terminal screws.

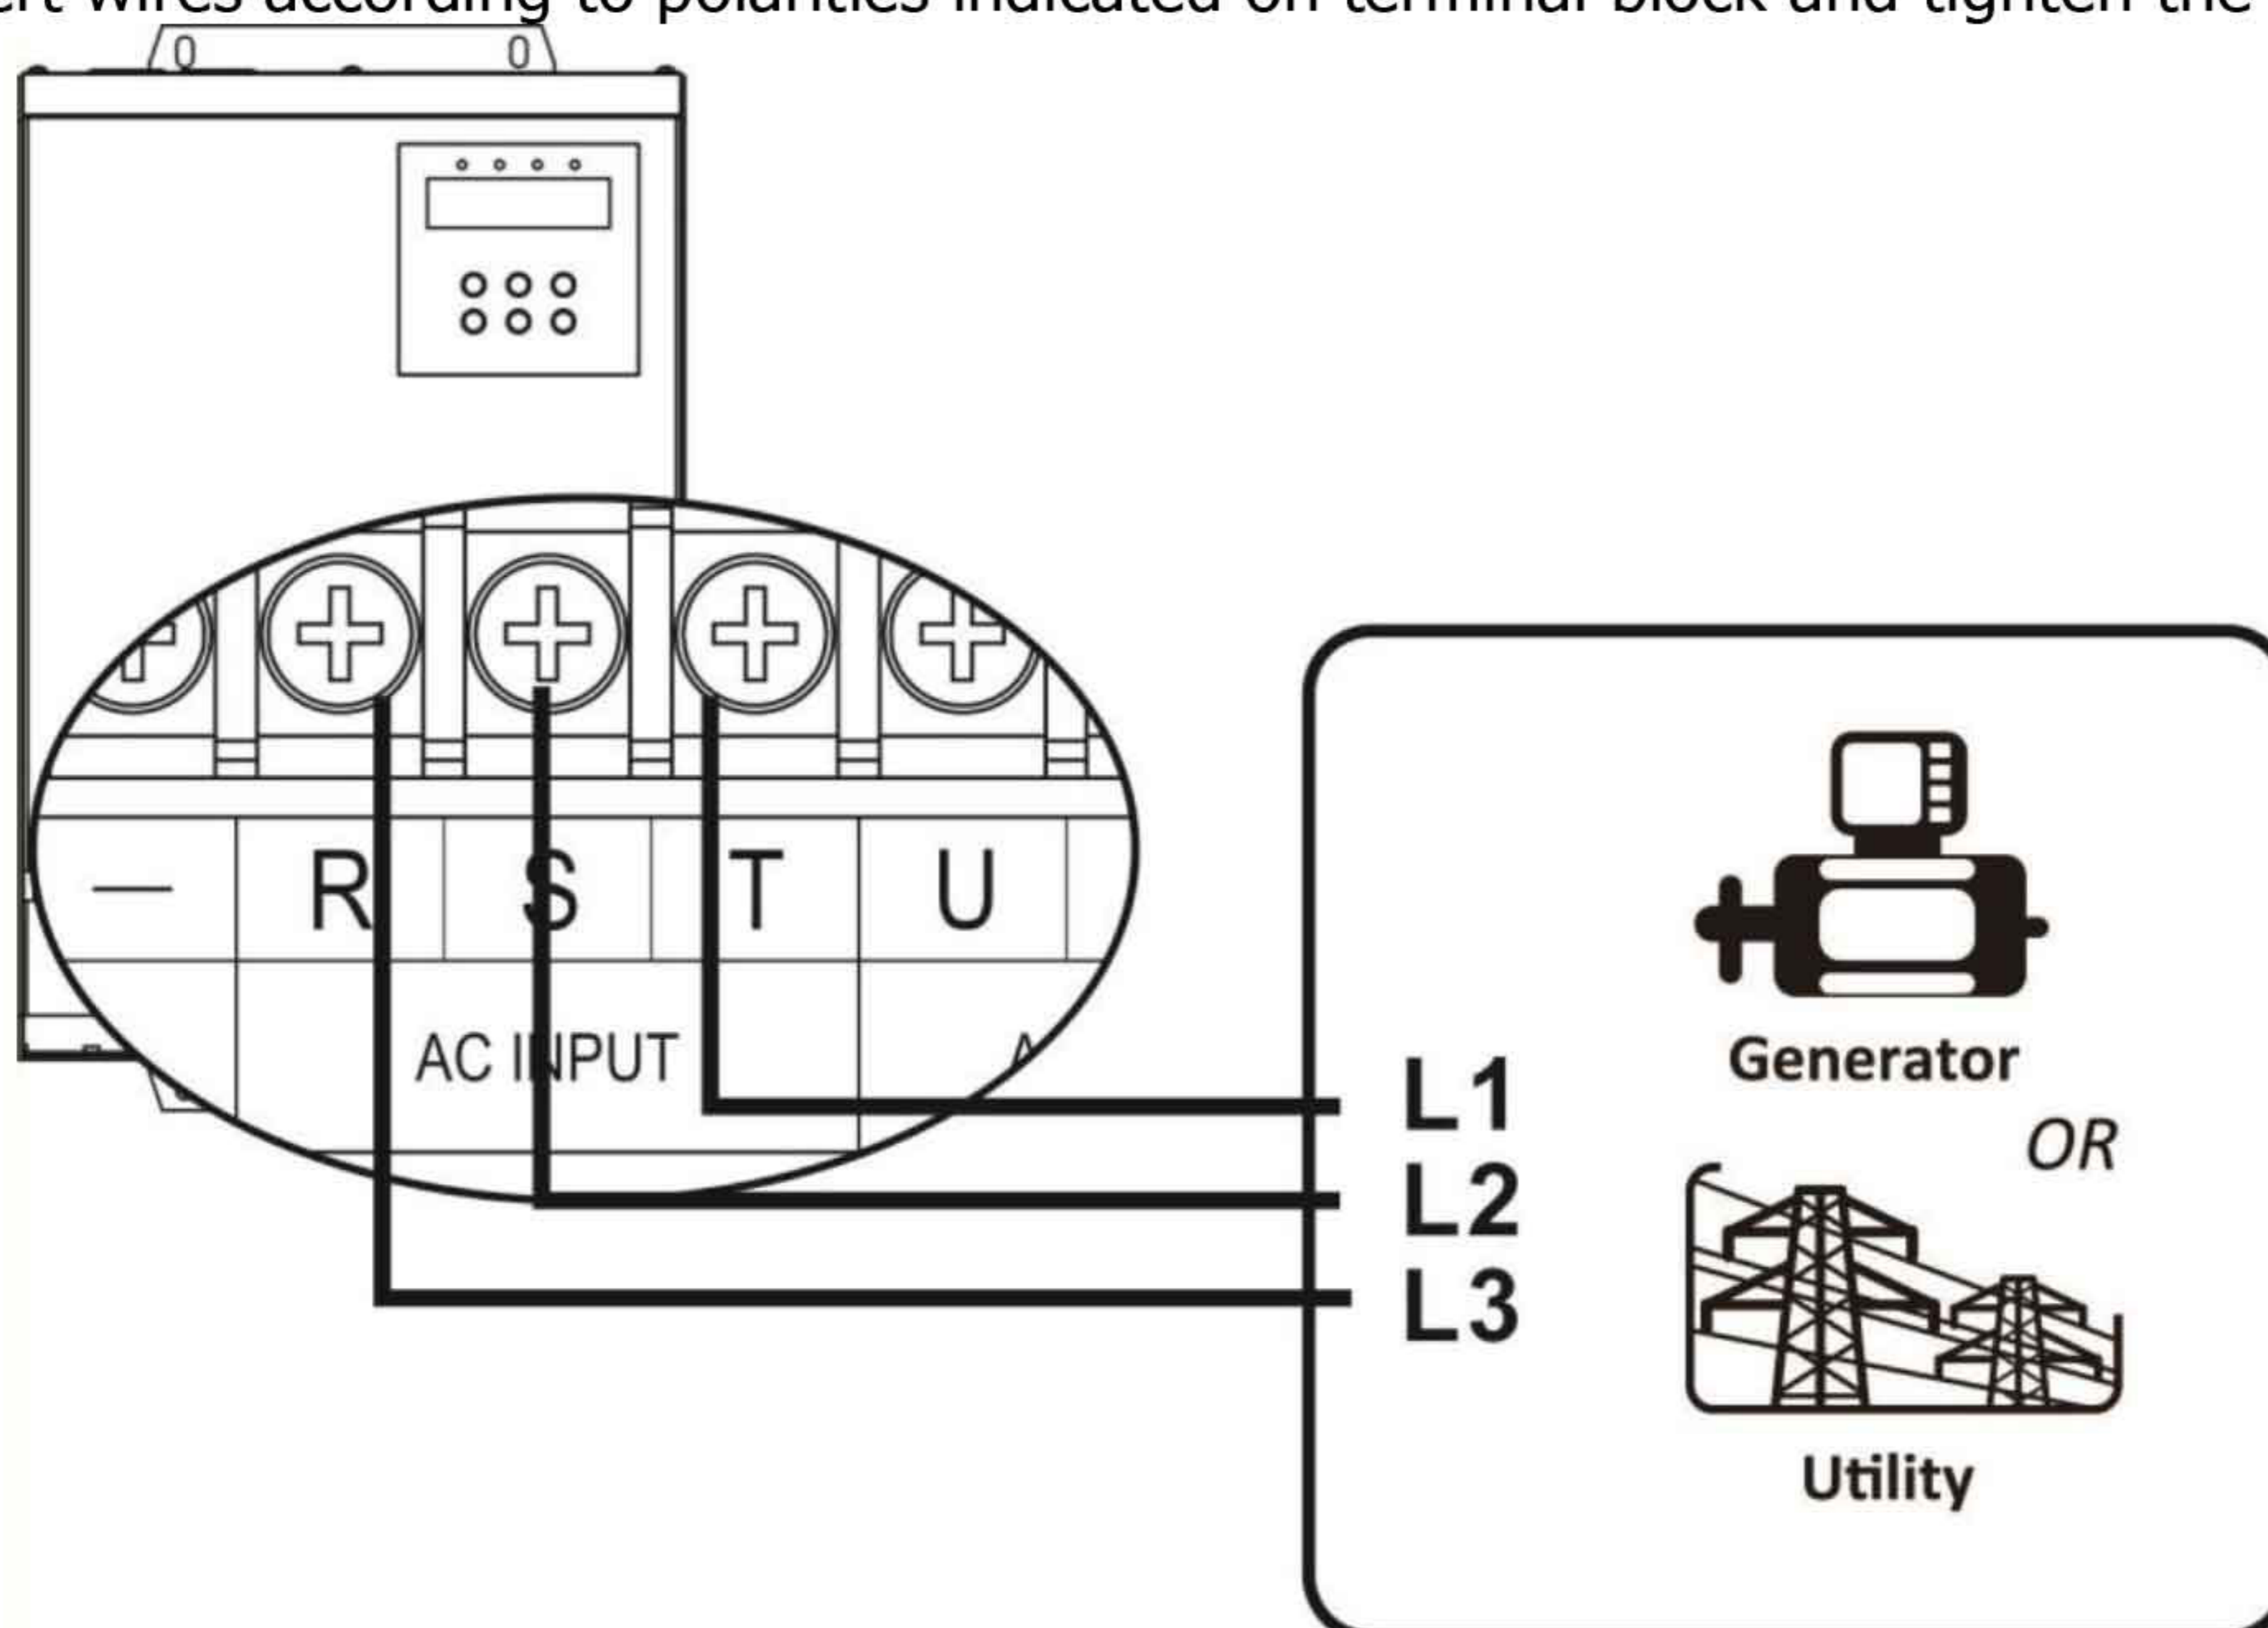

**WARNING:**

Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

4. Make sure the wires are securely connected.


If sunlight is not sufficient or the weather is raining or cloudy, please be sure to manually switch AC input power source to utility or backup AC power source (generator) to guarantee water pump running all the time.

**CAUTION: Important**


Only one input power source is connected to the inverter anytime. Otherwise, it will cause inverter damage or human injury.

**Final Assembly**

After connecting all wirings, please put bottom cover back by screwing two screws as shown below.

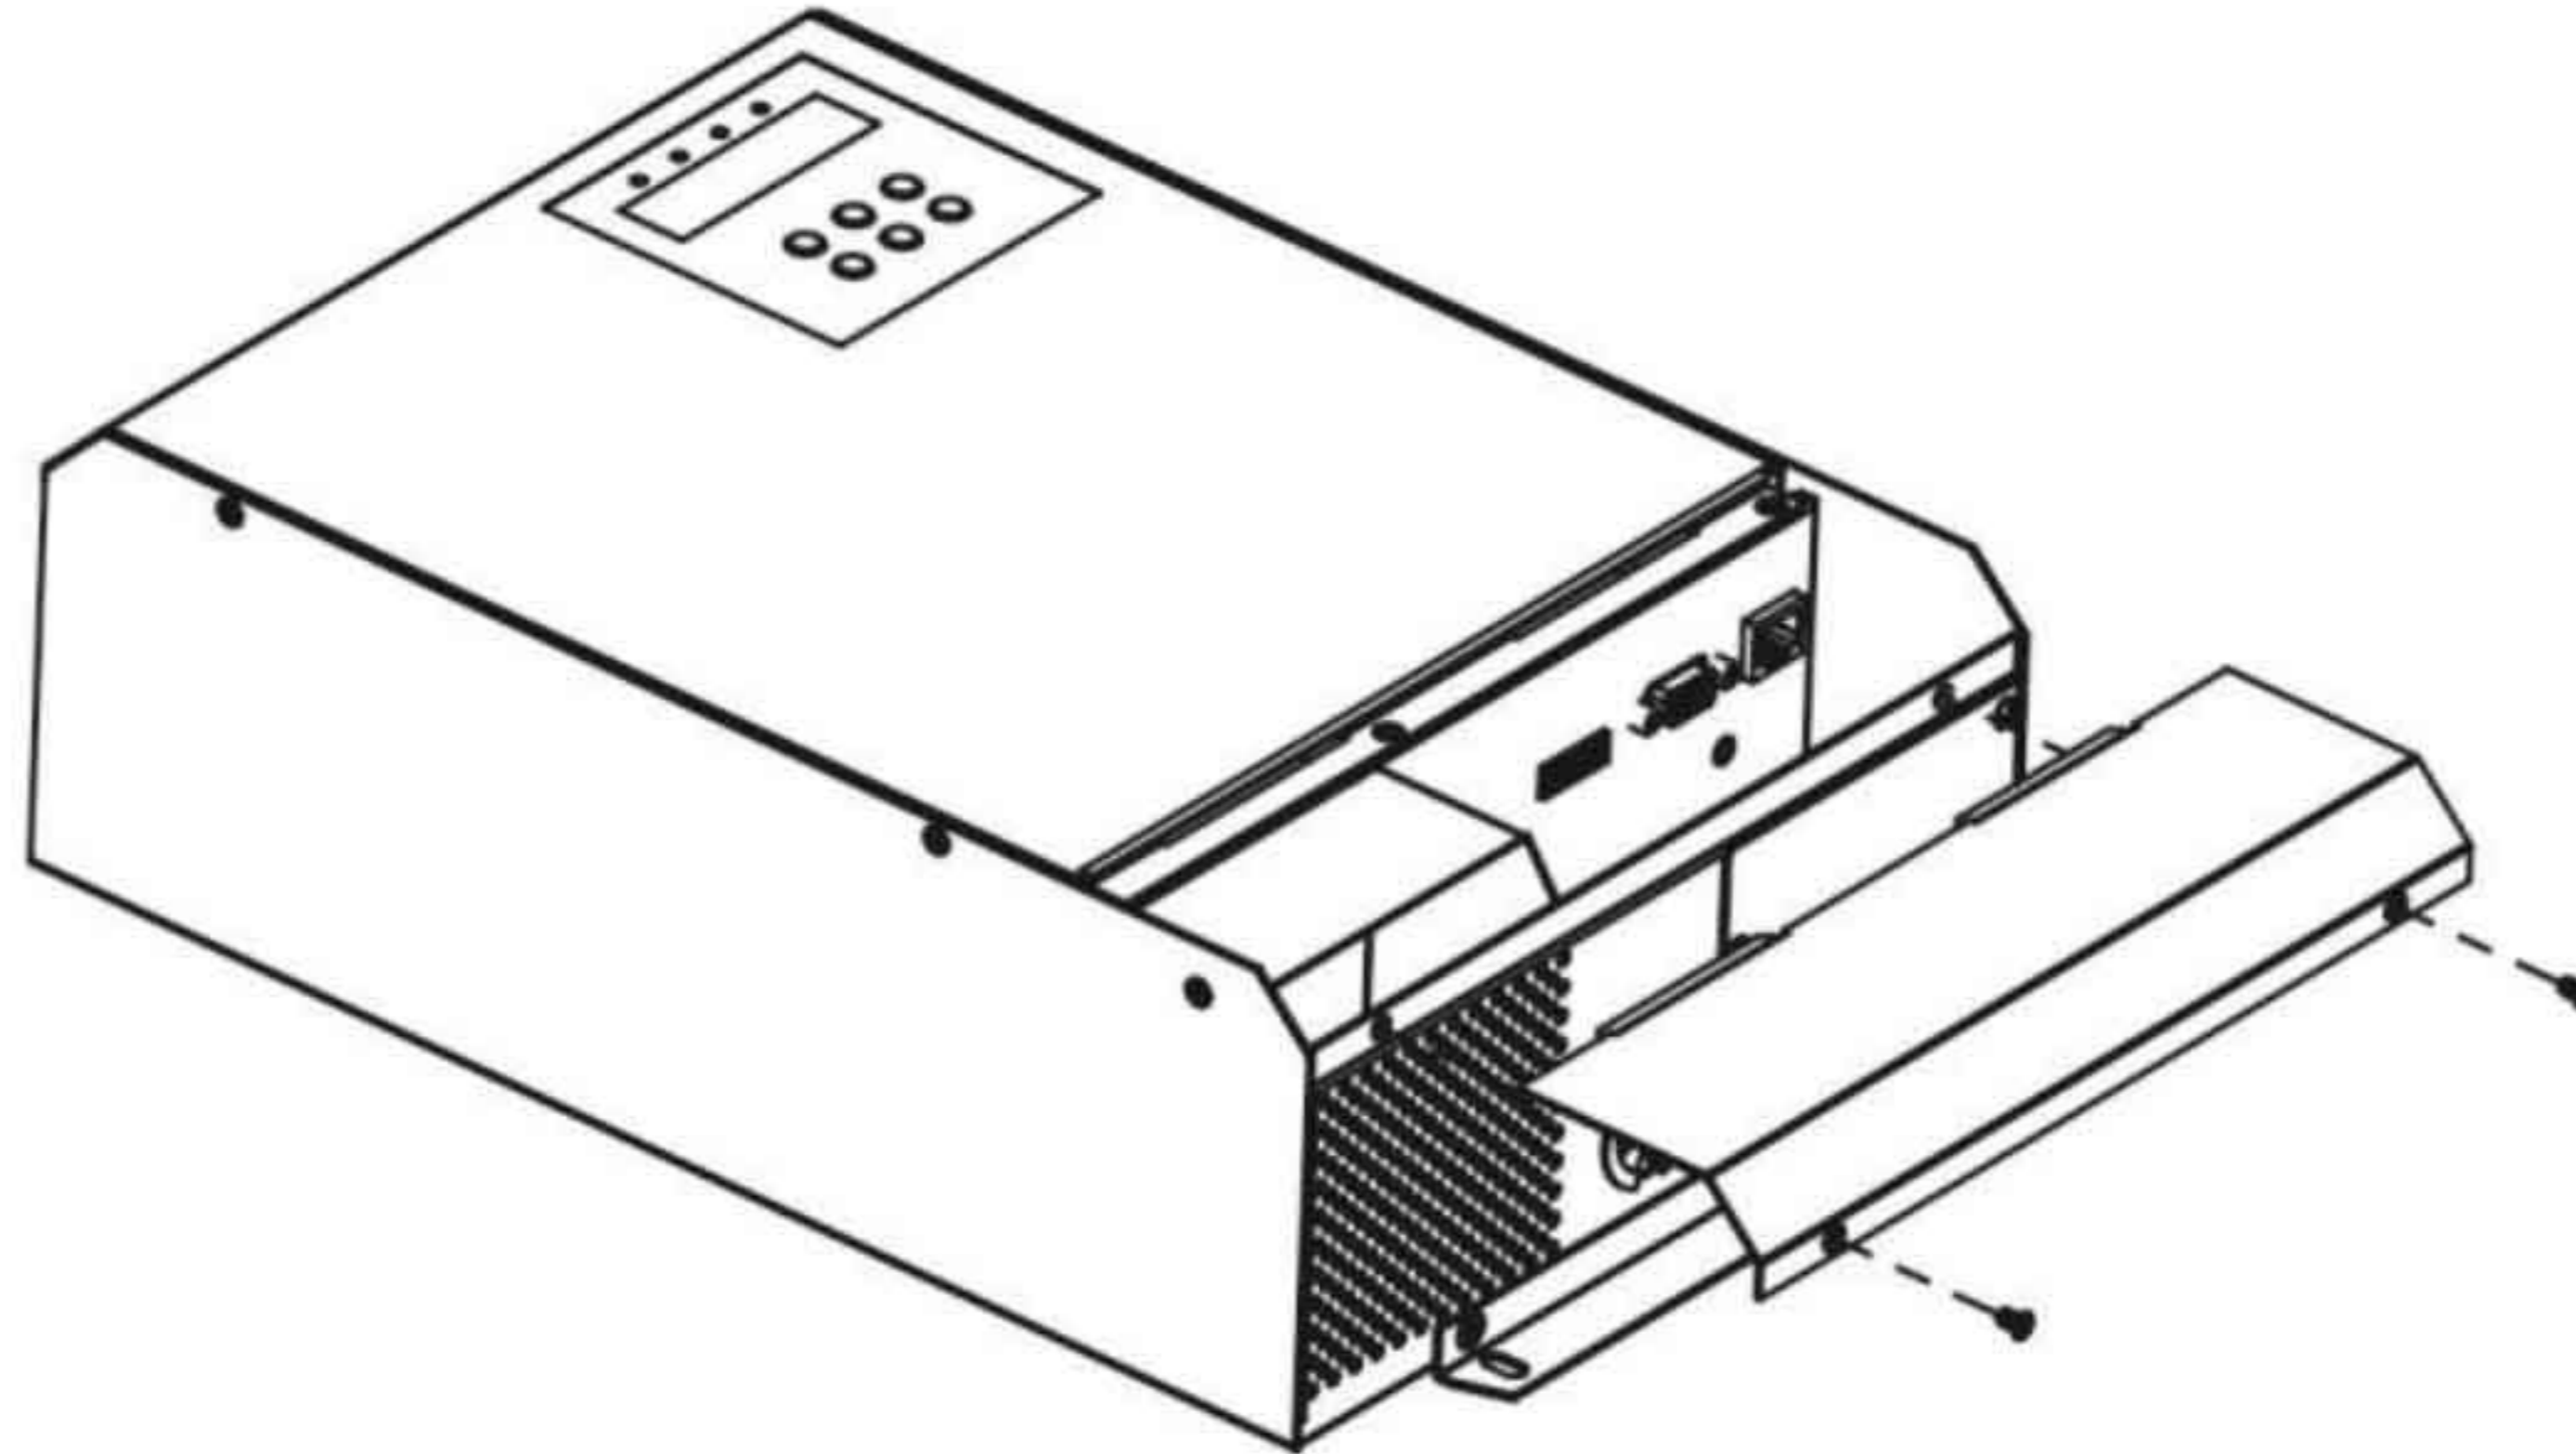**Control Signal Connection (Optional)**

This control signal ports are to detect water level to prevent water pump from dry running.

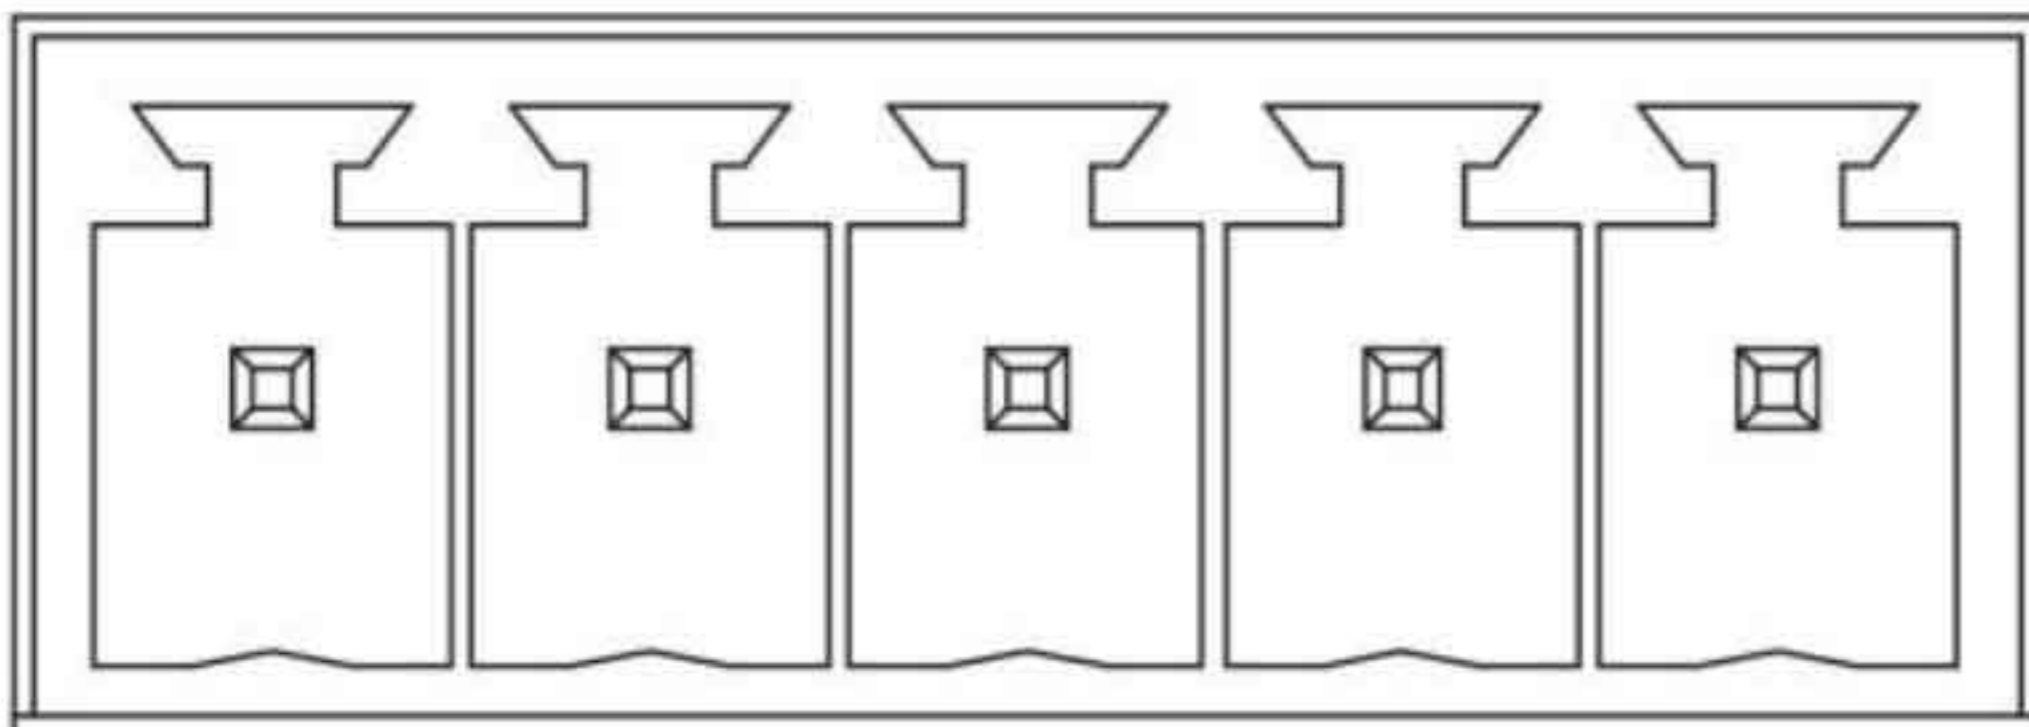

<b>COM1</b>	<b>DI1</b>	<b>DI2</b>	<b>DI3</b>	<b>COM2</b>
Water level detector (1)		Remote float switch (2)		

**Water level detector:**

It's to prevent the water pump dry running by connecting to water level probe. The length of connecting wire should not longer than 50m. If the water level is normal in the well, please keep the water level detector in normal closed status (NC). If the water level is low in the well, the water level detector will be open status (NO). If this port is not connected to water level probe, be sure to connect COM1 and DI1 together. It's default setting from factory.

**Remote float switch:**

It's to prevent water tank overflow or underflow by connecting to float switch in water tank. This function is only available when the auto turn-on function is enabled. When water tank is full, it will receive signal from float switch and stop the inverter. At this time, the DI2 and DI3 is in open status (NO). When water tank is in low level, it will receive signal from float switch and start up the inverter. At this time, DI3 and COM2 are normally closed together. DI2 is normally open.

# COMMISSIONING

Step 1: Check the following requirements before commissioning:


- Ensure all wires are firmly and correctly connected
- Use a megger to check insulation of motor and wires
- Check if the open circuit DC voltage of PV module meets requirement

Step 2: Switch on DC breaker and provide power to the inverter. Then, LCD screen will show 0.00. Please set up the parameters of the inverter such as rated power, rated frequency, rated current and rated voltage. For the detailed setting, please check "Parameter setting" section in Operation chapter.

Step 3: Press "RUN" button to activate the inverter. If the output frequency or water yield is low, it may be wrong for output wire connection. Please exchange any two wires connected to the motor. Please be sure the output frequency and water yield are normal. It means the wire connection is correct and complete.

# OPERATION


## Power ON/OFF

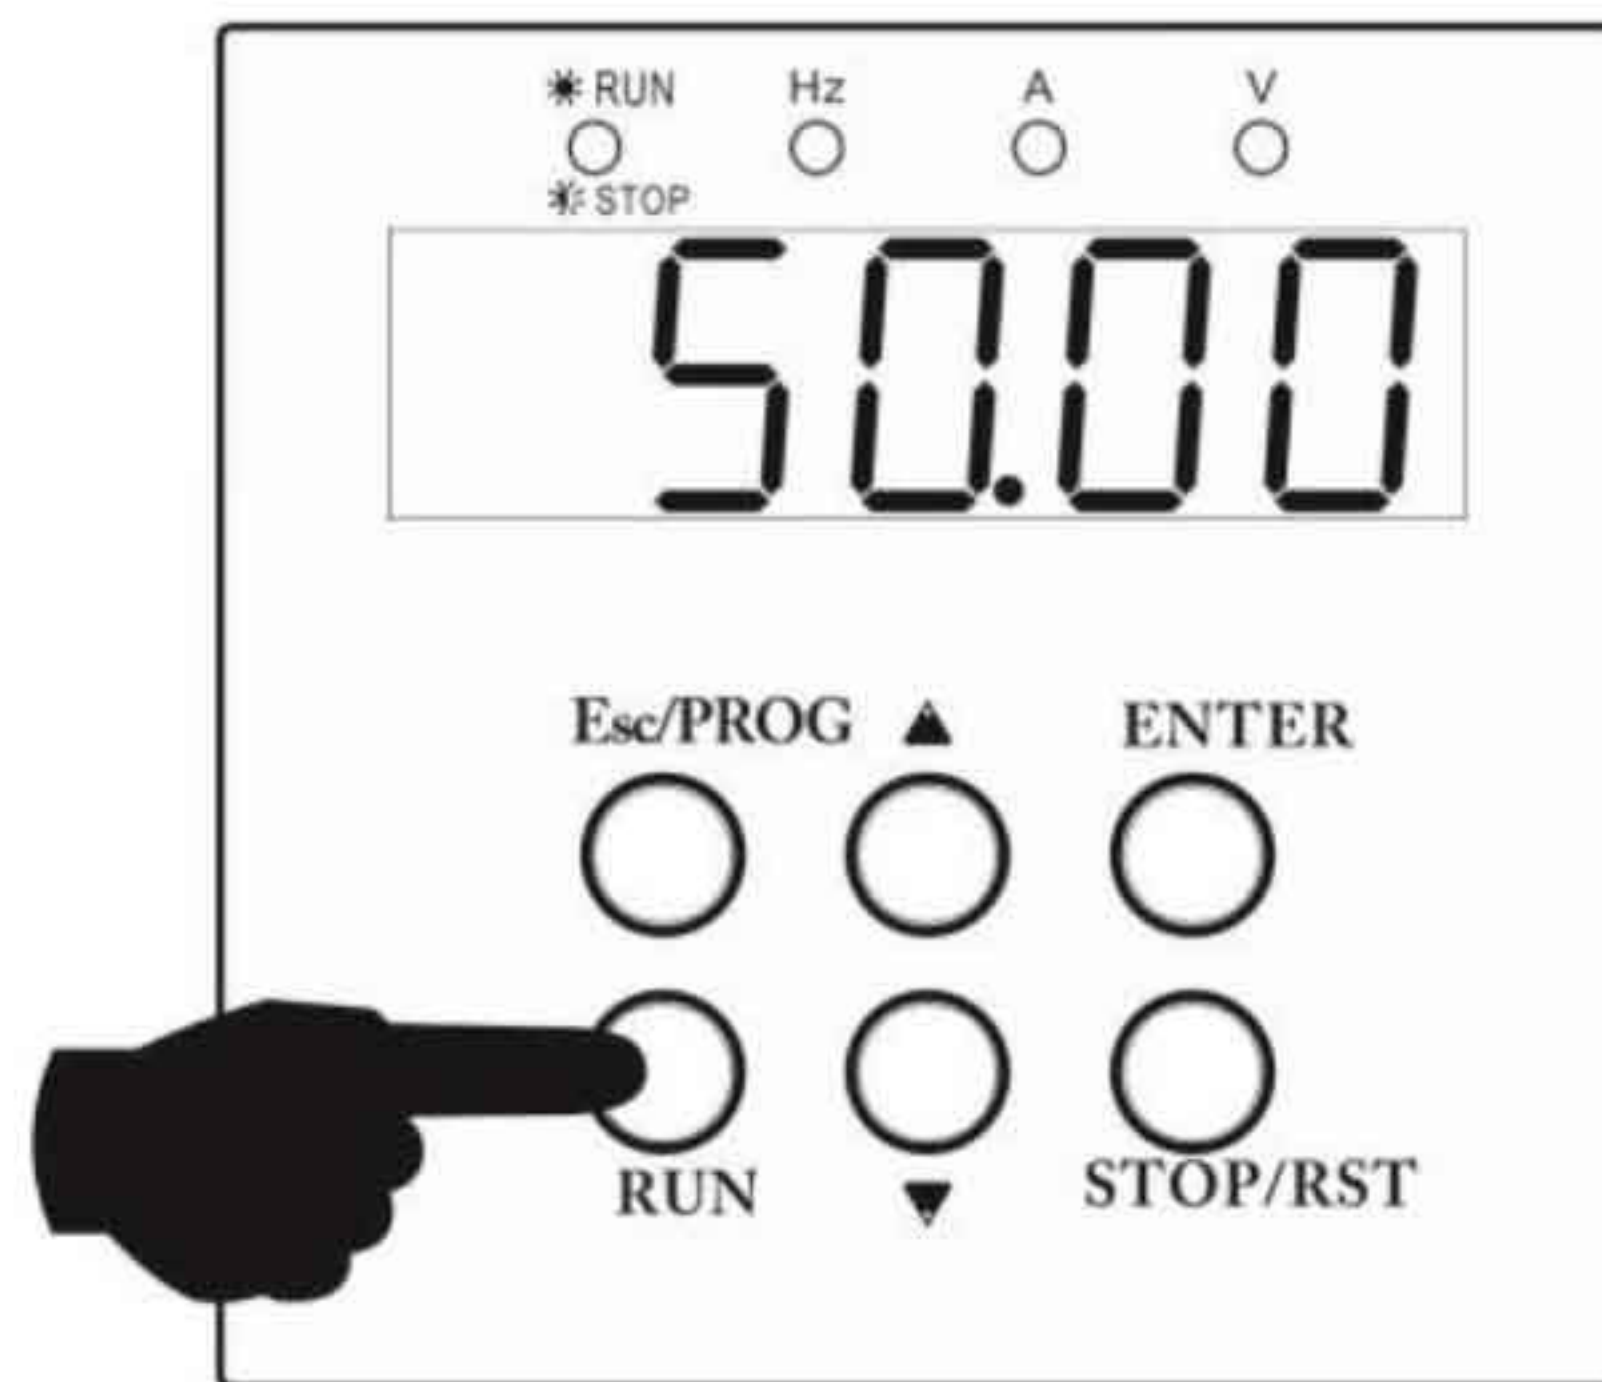

Once the unit has been properly installed, simply press "RUN" button (located on the button area) to turn on the unit.

## Operation and Display Panel

The operation and display panel, shown in below chart, is on the top case of the inverter. It includes four indicators, six function buttons and a LCD screen, indicating the operating status and input/output power information.

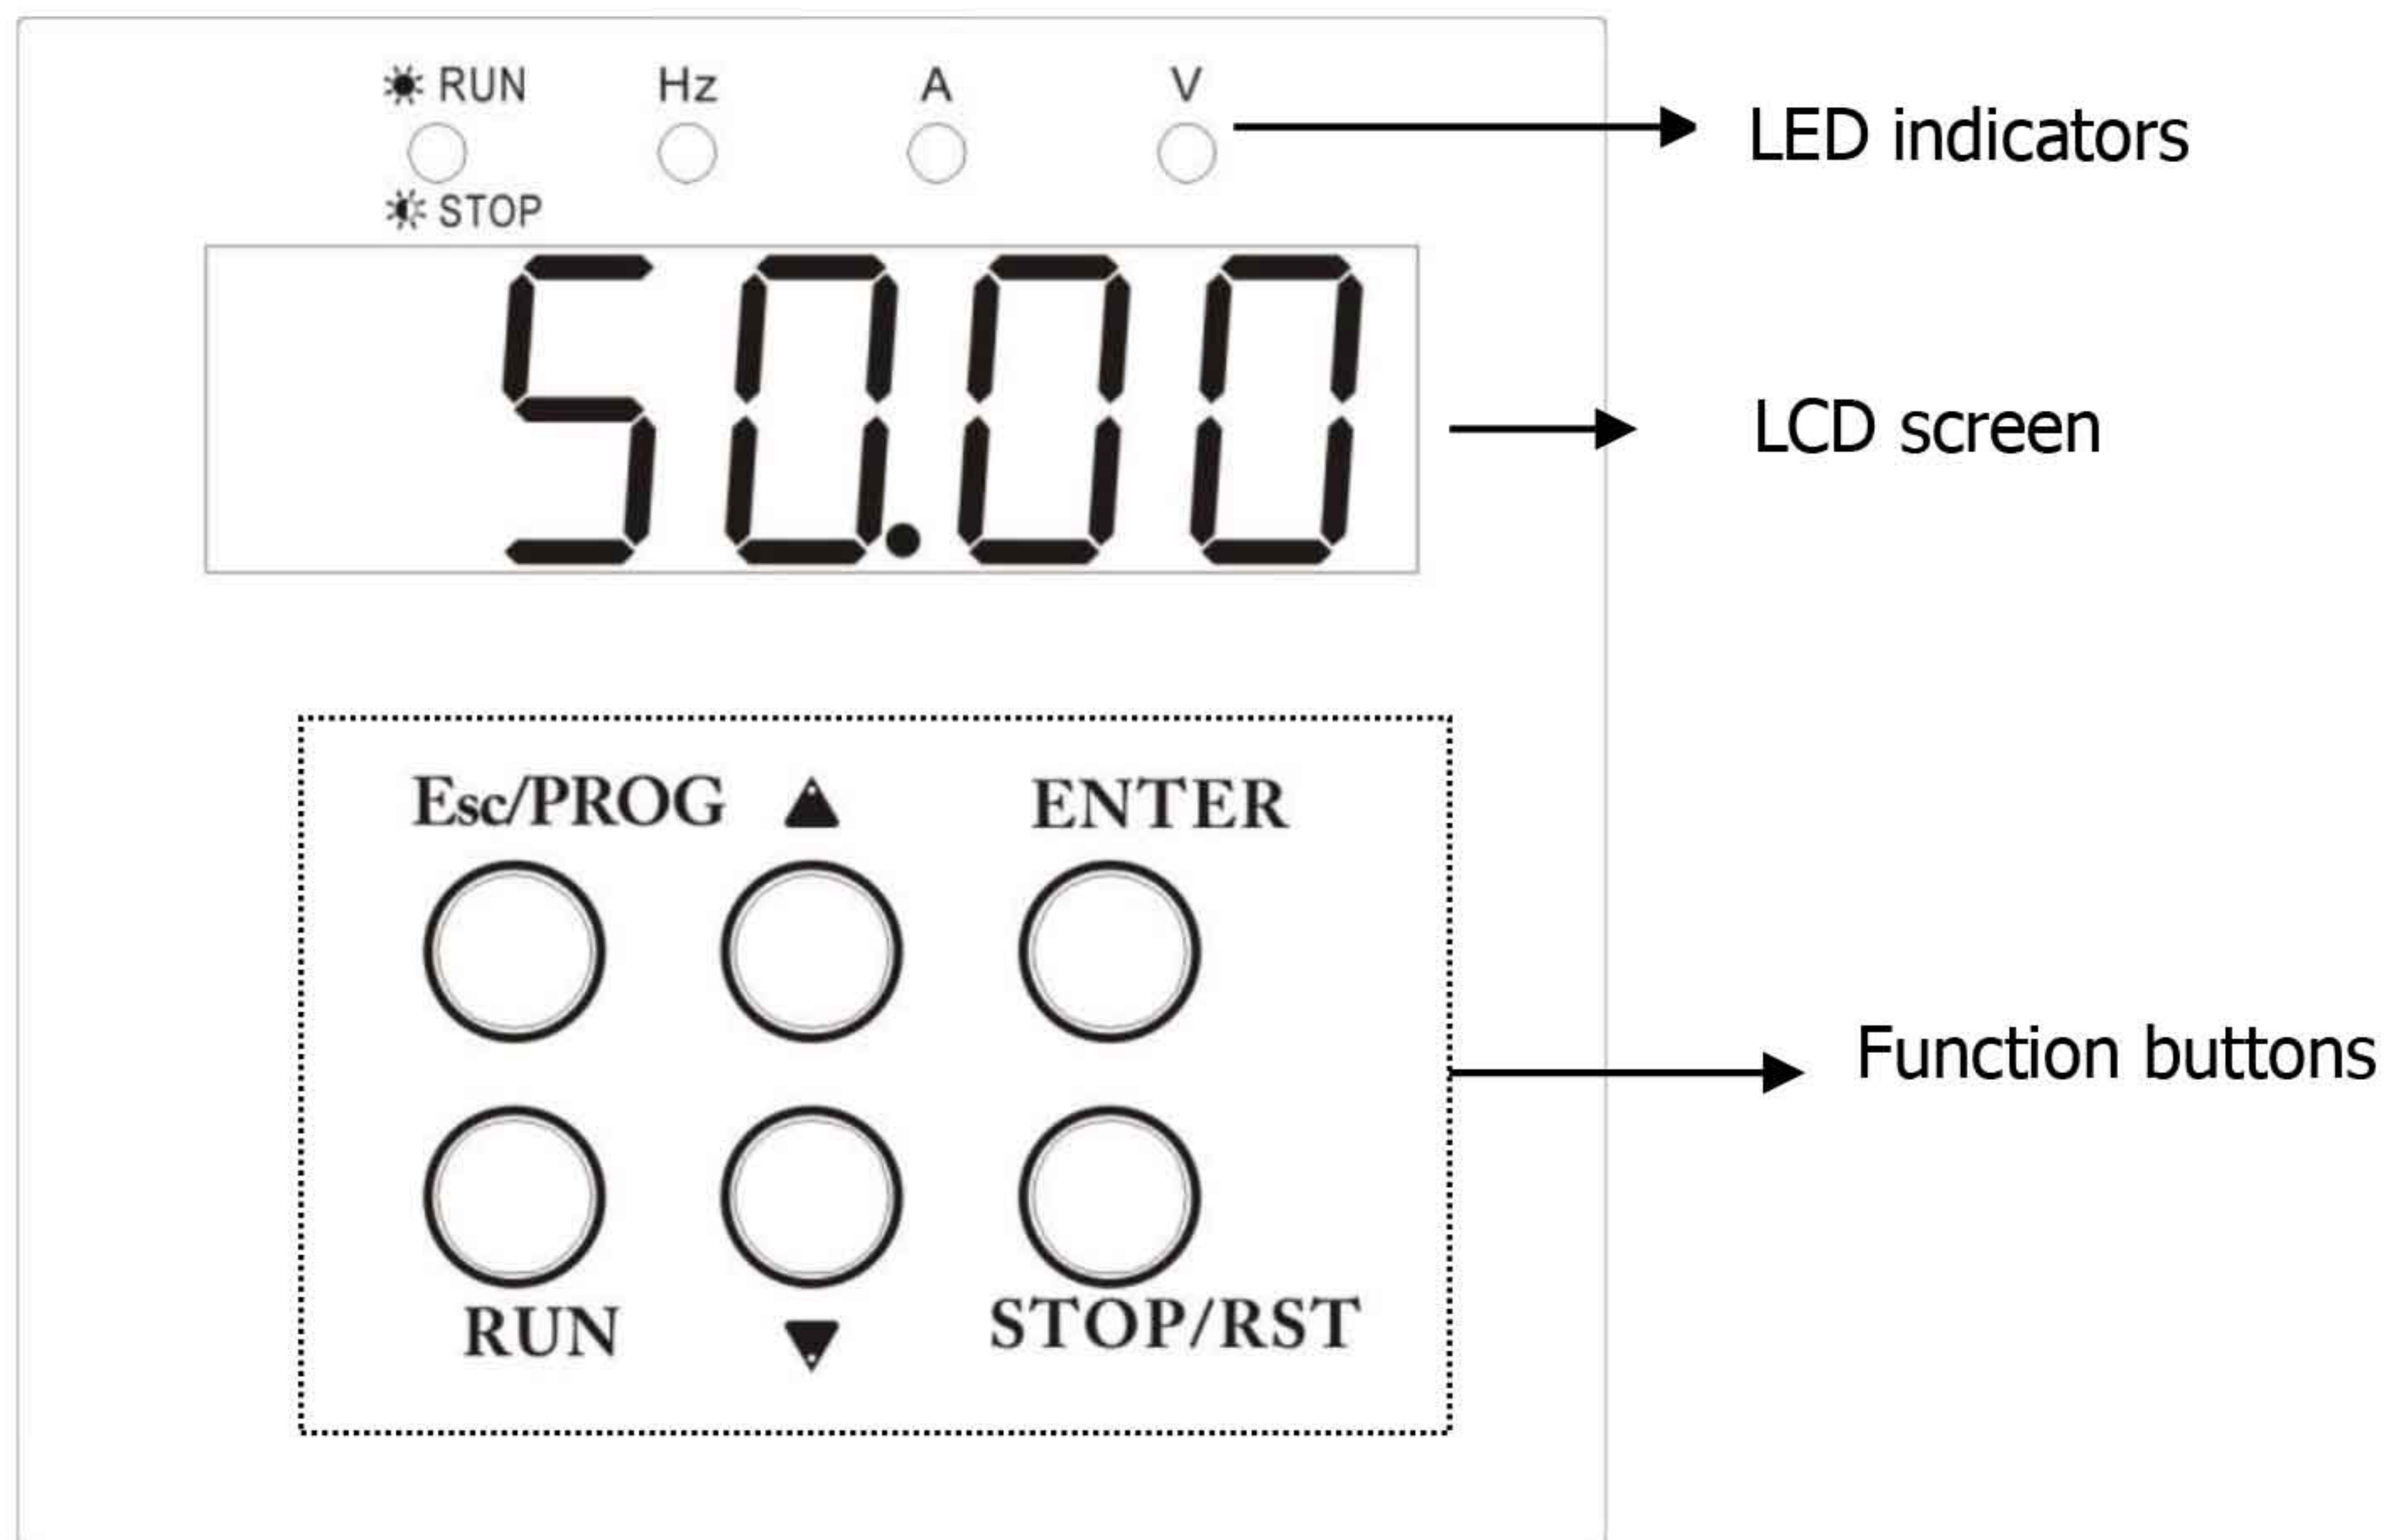

### LED Indicator

LED Indicator			Messages
Hz	Green	Solid On	Output frequency value is displayed on the LCD screen.
A	Green	Solid On	Output current value is displayed on the LCD screen.
V	Green	Solid On	Output voltage value is displayed on the LCD screen.
A and V	Green	Solid on	Output power value is displayed on the LCD screen.
STOP/RUN	Green	Solid on	The inverter is running.
	Green	OFF	The inverter stops.


### Function Buttons

Function Button	Description
Esc/PROG	To enter or exit setting mode.
ENTER	To confirm the selection/value in setting mode.
RUN	To turn on the unit, press this button for at least 1 second.

STOP/RST	<ul style="list-style-type: none"> <li>To turn off the unit, press this button for at least 1 second.</li> <li>To reset fault message, press this button for at least 1 second.</li> </ul>
▲	To increase the setting value.
▼	To decrease the setting value.
▼ and Esc/PROG	Press these two buttons at the same time to move cursor location.

## Parameter Setting

The entire LCD structure is demonstrated as below chart.

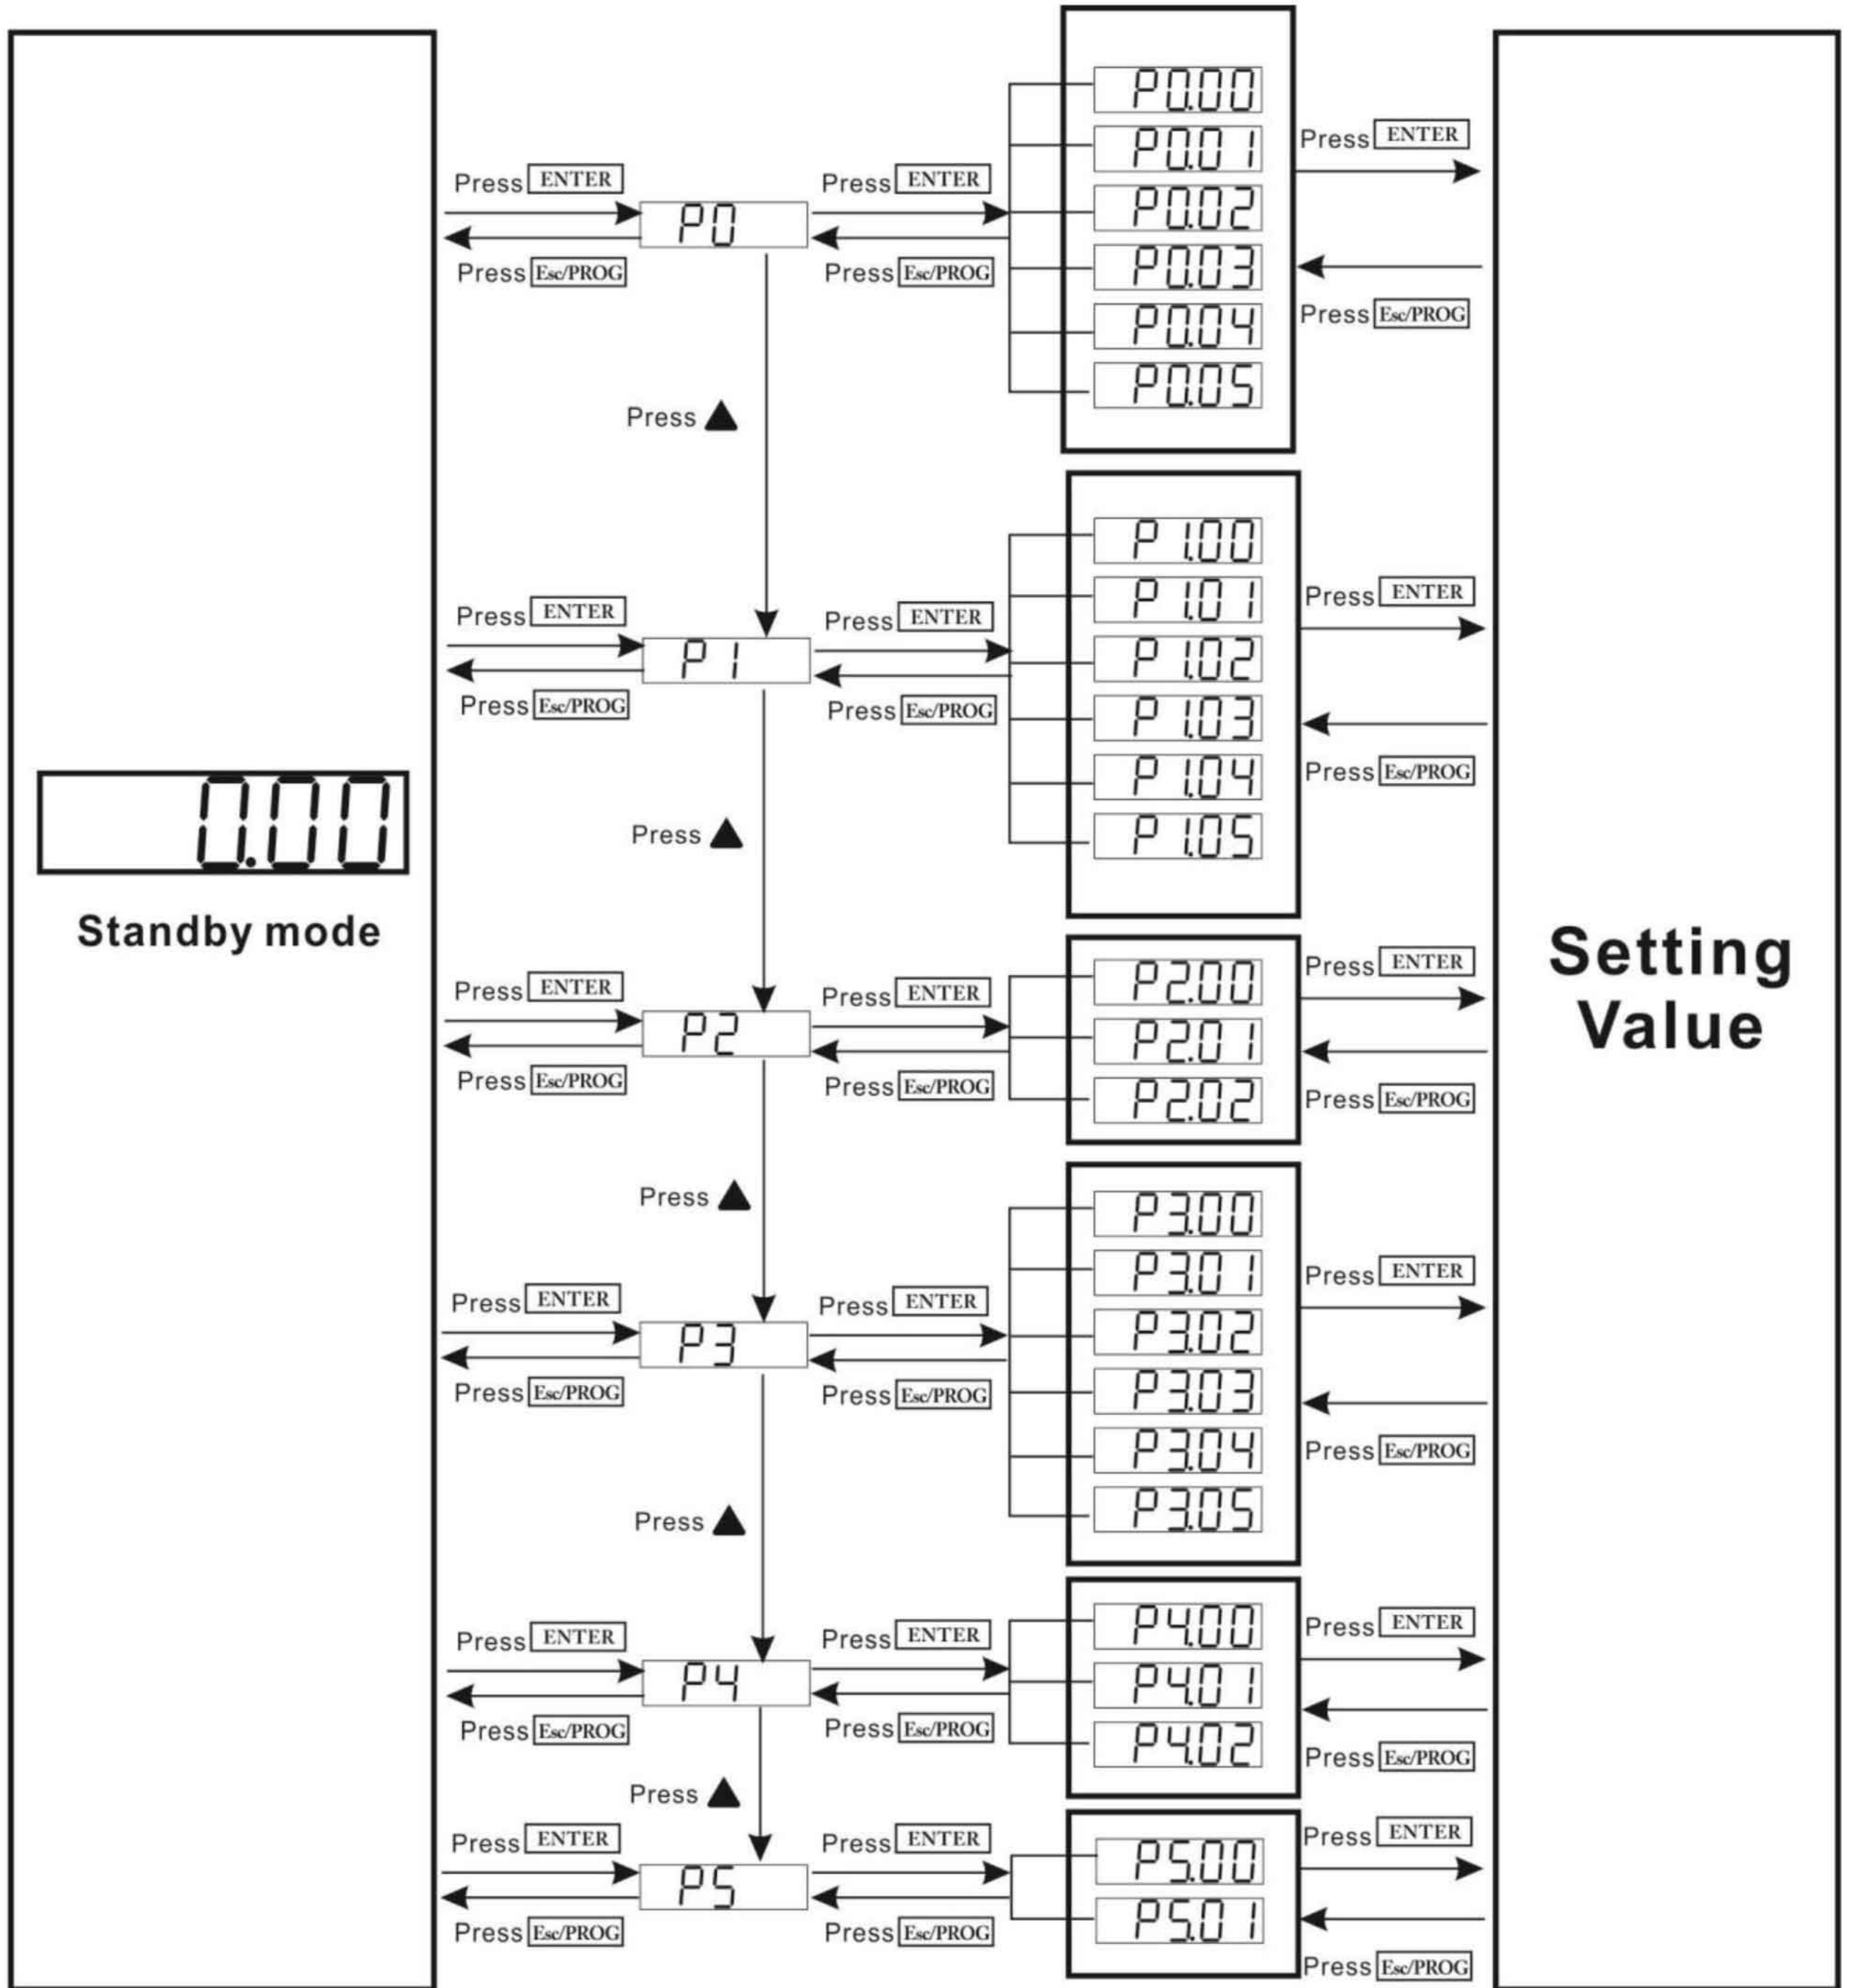

Currently, parameter setting is not authorized for end user to modify. Please check local dealer or installer for the details.

○: This parameter can be modified no matter the inverter is in operation or off status.

⊙: This parameter can not be modified when inverter is in operation.

Program #	Description	Setting Range	Unit	Default Value	Note
P0 Parameter settings for the motor					
P0.00	Nominal power factor	10-11000	W	7500	⊙
P0.01	Nominal frequency	50/60	Hz	50	⊙
P0.02	Nominal voltage	323-506	V	380	⊙
P0.03	Nominal current	0.1-60	A	<b>15</b>	⊙
P0.04	Upper limit for frequency	10 – setting value in P0.01	Hz	50	⊙
P0.05	Low limit for frequency	10 – setting value in P0.04	Hz	10	⊙
P1 Over-current device on the motor and torque increasing					
P1.00	Maximum current limit	10-200	%	110	A multiple of nominal current ○
P1.01	Kp for max. current control	50-6000	None	1000	○
P1.02	Ki for max. current control	5-1000	None	100	○
P1.03	60S overload protection	110-300	%	150	⊙
P1.04	Overload protection on motor	110-300	%	200	⊙
P1.05	Voltage for torque increasing	0-10	%	0	Percentage of nominal voltage
P2 DC battery voltage setting					
P2.00	Over DC voltage protection	Setting value in P2.00 - 800	V	800	⊙
P2.01	Under DC voltage protection	320 – Setting value in P2.01	V	320	⊙
P2.02	PV reference voltage	Setting value in P2.00 – setting value in P2.01	V	530	○

P3 Protection setting for the inverter of the water pump					
P3.00	Sleep mode while PV energy is weak	10-3600	S	120	○
P3.01	Sleep mode for dry running	10-7200	S	1200	○
P3.02	Over temperature fault on inverter	60-100	°C	85	⊙
P3.03	Over temperature warning on inverter	10 – setting value in P3.02	°C	75	○
P3.04	Acceleration time for motor	5-3600	S	20	⊙
P3.05	Deceleration time for motor	5-3600	S	20	⊙
P4 Inverter operation mode setting					
P4.00	MPPT function enable/disable	0 : Disable. Control PV voltage in setting value of P2.02 1 : Enable	None	1	⊙
P4.01	Input source	0 : PV input 1: AC input	None	0	⊙
P4.02	Auto turn-on	0 : Disable 1 : Enable	None	0	⊙
P5 User password setting and restore to default setting					
P5.00	User password setting	0-9999	None	0	○
P5.01	Restore to default setting	0 : No 1 : Yes	None	0	⊙



# Fault and Warning Code

All fault and warning codes can be reset by pressing "RST" button except for A07 and A11. When faults or warning occur, press "RST" button and the inverter will enter standby mode. Please press "RUN" button to turn on the inverter for operation again.

After A02 or A03 warning occurs, the inverter will auto restart operation after a period of sleep mode. If pressing "RST" button during sleep mode, please be sure to press "RUN" button again for operation.

## Fault Reference Code

Fault code	Fault type	Possible Cause
E01	Zero-crossing detection loss on output voltage.	<ol style="list-style-type: none"> <li>1. There is something wrong with the zero-crossing detection circuit.</li> <li>2. There is something wrong with driver circuit.</li> <li>3. PV input power is low.</li> </ol>
E02	Time out for BUS soft start	The resistor of soft start is broken.
E03	Relay fault	The Relay is broken.
E04	Over voltage in output	<ol style="list-style-type: none"> <li>1. Inverter control is abnormal.</li> <li>2. Detection is interfered.</li> </ol>
E05	Over current in output	<ol style="list-style-type: none"> <li>1. Output short circuited.</li> <li>2. The motor is suddenly locked.</li> <li>3. The motor is abnormal.</li> </ol>
E06	Output voltage RMS High	Inverter control is abnormal.
E07	High PV voltage	<ol style="list-style-type: none"> <li>1. PV input voltage is too high.</li> <li>2. There is something wrong with voltage detection circuit.</li> </ol>
E08	Current unbalance	<ol style="list-style-type: none"> <li>1. Output phase loss</li> <li>2. Output wire is short to the earth.</li> <li>3. The motor is abnormal.</li> </ol>
E09	Fan Locked	The fan is locked.
E10	Over Temperature	<ol style="list-style-type: none"> <li>1. IGBT temperature is too high</li> <li>2. The wire of IGBT temperature detection is not connected.</li> </ol>
E11	Over current.	<ol style="list-style-type: none"> <li>1. Output short circuited.</li> <li>2. The motor is suddenly locked.</li> <li>3. The motor is abnormal.</li> </ol>

## Warning Reference Codes

Warning code	Warning type	Possible Cause
A01	PV input voltage is too low.	1. PV input voltage is too low. 2. Sunlight is too weak.
A02	Weak sunlight	Sunlight is too weak
A03	Dry running	Water level in the well is low.
A04	Overload	1. The motor is suddenly locked. 2. The pump head is too high. 3. Wrong current setting on the motor.
A05	Over current	1. The motor is suddenly locked. 2. Wrong current setting on the motor.
A06	EEPROM error	There is something wrong with EEPROM circuit.
A07	IGBT over temperature warning	Over temperature on IGBT.
A08	Over temperature warning	Over temperature warning
A09	Over temperature	1. Environment temperature is beyond the upper limit. 2. The wire of environment temperature detection is not connected.
A10	Wrong parameter setting in the motor.	Wrong parameter setting in the motor.
A11	Water tank is full.	Water tank is full.
A12	Water tank is dry.	No water or water in low level in the water tower.
A13	Well is dry.	No water or water in low level in the well.

# SPECIFICATIONS

<b>MODEL</b>	<b>2.2KW</b>	<b>7.5KW</b>	<b>11KW</b>
<b>Maximum PV Array Power</b>	3500 W	12000 W	17600 W
<b>Rated Output Power</b>	2200 W	7500 W	11000 W
<b>PV INPUT (DC)</b>			
Maximum DC Voltage	800 VDC		
Start-up Voltage	350 VDC		
MPPT Voltage Range	500 VDC ~ 600VDC		
Number of MPP Trackers	1		
Input Current	4.3 A	14.5 A	21.3 A
<b>OPTIONAL AC INPUT</b>			
Input Voltage	3 x 380VAC/400VAC/415VAC/440VAC		
Maximum Input Current	5.8 A	20.5 A	27 A
Apparent Power	4000 VA	11000 VA	16500 VA
<b>OUTPUT</b>			
Nominal Voltage	3 x 380/400/415/440 VAC		
Efficiency	> 97%		
Output Current	5.1 A	17 A	26 A
Motor Type	Three-phase asynchronous motor		
Frequency Precision	±0.2%		
<b>PROTECTION</b>			
Full Protection	Over-voltage, under-voltage, over-current, surge, over-temperature and short circuit protection		
<b>PHYSICAL</b>			
Dimension, D X W X H (mm)	110 x 230 x 342		
Net Weight (kgs)	5.5	6	6.5
Type of Mechanical Protection	IP20		
<b>INTERACE</b>			
Communication Port	RS-232/RS-485		
<b>ENVIRONMENT</b>			
Humidity	< 95% RH (No condensing)		
Operating Temperature	-20°C~45°C at 100% full load, 46°C~60°C power derating		